

**User Manual for the  
RC:110A Reader Unit  
and the  
Intrinsically Safe CR:110AIS  
doseBadge Personal Noise  
Dosemeter**

Group II Non-Mining

CE Ex II 1 G

EEx ia IIC T4

IECEX: Ex ia IIC T4

CE<sub>1180</sub>

Group I Mining

CE Ex I M1

EEx ia I

IECEX: Ex ia I

CE<sub>1180</sub>



This manual, the software to which it relates, the  
program code and drawings are all:  
© Copyright Cirrus Research plc 1989-2022

Rev. 08.1

The content of this manual, any illustrations, technical information and descriptions within this document were correct at the time of going to print. Cirrus Research plc reserves the right to make any changes necessary, without notice, in line with the policy of continuing product development and improvement.

No part of this publication may be duplicated, reprinted, stored in a data processing system or transmitted by electronic, mechanical, photographic or other means, or recorded, translated, edited, abridged or expanded without the prior written consent of Cirrus Research plc.

No liability is accepted for any inaccuracies or omissions in this manual, although due care has been taken to ensure that it is complete and accurate as possible.

Accessories supplied by Cirrus Research plc have been designed for use with the instrumentation manufactured by Cirrus Research plc. No responsibility is accepted for damage caused by the use of any other parts or accessories.

In order to take account of a policy of continual development, Cirrus Research plc reserves the right to change any of the information contained in this publication without prior notice.

Produced by Cirrus Research plc, Acoustic House, Bridlington Road, Hunmanby, North Yorkshire, YO14 0PH, United Kingdom.

© Copyright Cirrus Research plc 2022

Reference Number 05/16/CR:110AIS/08

---

.....	<b>2</b>
<b>Preface</b> .....	<b>5</b>
Guidelines for Safe & Efficient Use .....	5
Warnings.....	5
Intrinsic Safety Approvals.....	5
Approved Equipment.....	6
Non-Approved Equipment.....	6
Using the CR:110AIS doseBadge .....	6
Servicing & Maintenance .....	7
doseBadge Configuration .....	7
doseBadge Battery Performance.....	7
Recharging the battery .....	8
Storage of the doseBadge .....	8
Battery Operating Life .....	8
Installing the doseBadge Software.....	8
<b>Section 1 Introduction</b> .....	<b>10</b>
How the doseBadge works .....	11
doseBadge System Configuration .....	11
<b>Section 2 Layout &amp; Controls</b> .....	<b>13</b>
RC:110A Reader Unit .....	13
CR:110AIS dosebadge .....	14
RC:101A Keyfob Remote Control .....	14
CU:110A Charger Unit.....	15
Important Features .....	15
<b>Section 3 Getting Started</b> .....	<b>16</b>
Quick Start .....	16
Unpacking the instrument for the first time.....	16
Charging the doseBadges .....	18
Inserting the RC:110A Reader Batteries .....	20
Checking the configuration .....	21
Clock (Time & Date) .....	21
Time History Measurement.....	22
Criterion Time (CT) .....	22
Criterion Level (CL) .....	22
Threshold Setting (TH) .....	23
Time Weighting Setting (TW).....	23
Exchange Rate Setting (Q).....	23
Dual Channel .....	24
Dose Exceedence .....	24
"Shake to Wake" function .....	25
Insert the doseBadge in the Acoustic Calibrator.....	26
Resetting the doseBadge .....	27
Calibrating the doseBadge .....	28
Mounting the doseBadge .....	29
Using the doseBadge Windshield .....	30
Starting the measurement.....	32
Using the RC:101A Keyfob Remote Control .....	33
Stopping a measurement .....	33
Checking the Calibration of the doseBadge .....	34
Downloading the measurements to the Reader Unit.....	35
Viewing stored measurements .....	36
Downloading stored measurements to the doseBadge software .....	36
<b>Section 4 Configuration &amp; Options</b> .....	<b>37</b>
RC:110A Reader Keypad .....	37
Menu Structure .....	38
Clear the memory of the Reader.....	40
Set Clock.....	40
Adjust Display Contrast .....	40

Time History Measurement Mode.....	41
Configuration of the Measurement Parameters .....	42
Criterion Time (CT) .....	42
Criterion Level (CL) .....	43
Threshold Level .....	44
Time Weighting .....	44
Exchange Rate.....	45
Dual Channel Measurement.....	45
% Dose Exceedence .....	46
<b>Section 5 Reviewing &amp; Downloading Measurements.....</b>	<b>47</b>
Reviewing stored measurements .....	47
Time History Display .....	49
Downloading measurements to a PC .....	51
Connecting the Reader to a PC.....	51
<b>Section 6 Maintenance &amp; Care .....</b>	<b>52</b>
Annual Verification & Servicing.....	52
Cleaning.....	52
Storing the doseBadge .....	52
Cycle Charge of the doseBadge Battery .....	53
Changing the Reader Batteries .....	53
Changing the RC:101A Keyfob Battery .....	55
<b>Section 7 Troubleshooting .....</b>	<b>56</b>
The CR:110A doseBadge .....	56
The RC:110A Reader .....	57
The Chargers .....	58
<b>Section 8 Glossary &amp; Terminology .....</b>	<b>59</b>
Terminology .....	59
Glossary .....	61
<b>Appendix 1 Specifications.....</b>	<b>64</b>
<b>Appendix 2 Ordering Information.....</b>	<b>67</b>
<b>Appendix 3 EU Declaration of Conformity .....</b>	<b>68</b>
<b>Appendix 4 Intrinsic Safety Certification .....</b>	<b>69</b>
Group I Mining Applications .....	69
Group II Non-Mining Applications .....	69
doseBadge Case Specifications.....	70
<b>Appendix 5 Intrinsic Safety Markings .....</b>	<b>71</b>
ATEX Directive Certification Description.....	71
CENELEC/IEC Certification Description .....	72
<b>Appendix 6 Intrinsic Safety Certificates .....</b>	<b>73</b>
<b>Appendix 7 doseBadge Calibration .....</b>	<b>74</b>
First Calibration.....	74
Second Calibration.....	74
Second Calibration and Drift .....	75
Recommended calibration procedure.....	75
<b>Warranty Information. ....</b>	<b>77</b>
<b>Cirrus Research Offices .....</b>	<b>78</b>

## Preface

### Guidelines for Safe & Efficient Use

**Please read all sections of this manual before attempting to use the instrument.**

### Warnings



This symbol is used throughout the manual to indicate that special attention should be taken and any instructions followed carefully. Information covered in these sections relates to operations that are vital to the efficient use of the instrument.

### Intrinsic Safety Approvals



The CR:110AIS doseBadge has been certified as being suitable for use in areas where intrinsic safety is a requirement for equipment.

The CR:110AIS doseBadge carries the following certification:

Group II Non-Mining	Group I Mining
CE Ex II 1 G	CE Ex I M1
EEx ia IIC T4	EEx ia I
IECEX: Ex ia IIC T4	IECEX: Ex ia I
CE <sub>1180</sub>	CE <sub>1180</sub>



In addition to these, the CR:110AIS carries an IECEx Intrinsic Safety Certification as follows:

Group I Non-Mining	Group II Mining
Ex ia II C T4	Ex ia I

Ex Approval is in accordance with the ATEX Directive. Full details of the Intrinsic Safety Certification are available on the Cirrus Research plc website at [www.cirrusresearch.co.uk/library#iscertificates](http://www.cirrusresearch.co.uk/library#iscertificates)



It is essential that the operator or user of the CR:110AIS doseBadge ensures that the certification provided by the unit is sufficient for the application and environment in which the equipment will be used.

Other approvals may be available for the CR:110AIS doseBadge. Please contact Cirrus Research plc for further details. No other versions of the doseBadge Personal Noise Dosimeter, manufactured by Cirrus Research plc, have been approved or carry Intrinsic Safety certification.

### Approved Equipment



The following components of the doseBadge system are approved for use in hazardous zones:

- CR:110AIS doseBadge Personal Noise Dosimeter
- UA:110 doseBadge Windshield for CR:110A IS doseBadge
- SP:131 doseBadge Mounting Kit (Supplied with the CR:110AIS doseBadge)
- No other components or parts of the doseBadge system are approved.

### Non-Approved Equipment



The following components of the doseBadge system are **not approved** for use in hazardous zones and do not carry intrinsic safety approval:

- RC:110A doseBadge Reader Unit
- RC:101A Keyfob Remote Control
- CU:195A Mains Power Supply
- CU:110A Charger Unit
- ZL:102 USB Download Cable
- CK:100 Carrying Case for doseBadge Measurement Kits

### Using the CR:110AIS doseBadge



The CR:110AIS doseBadge is controlled by the RC:110A Reader Unit. The RC:110A Reader Unit **does not** carry intrinsic safety certification and therefore must not be used in hazardous zones.

The CR:110AIS doseBadge **must be** started, stopped, read, calibrated and charged outside of any areas designated as hazardous.



Before entering an hazardous area with the CR:110AIS doseBadge, the following items must be checked.

1. Check that there is no sign of damage to the CR:110AIS doseBadge that may affect the integrity of the instrument.
-

2. Check that the CR:110AIS doseBadge is running and the blue indicator is flashing. The RC:110A Reader Unit and the RC:101A Keyfob Remote Control are **not approved** for use in hazardous areas and so the doseBadge must be reset, calibrated, started, stopped and read outside of the hazardous area.
3. The sealing baseplate with the 43mm metal insert has been screwed onto the doseBadge. Do not use any other baseplate.
4. The doseBadge is at ambient temperature (for example has not just been removed from a hot environment).

## Servicing & Maintenance



There are no user serviceable parts inside the CR:110AIS doseBadge and no user adjustment is possible of the internal components of the doseBadge.

Service and Calibration must only be carried out by Cirrus Research plc or by an service centre that has been approved by Cirrus Research plc.

The information relating to the CR:110AIS version of the doseBadge Personal Noise Dosimeter is provided in accordance with the requirements of EN 50014:1998 and EN 50020:2002.

Full details of the Intrinsic Safety Certification of the CR:110AIS doseBadge are given in Appendix 5.

## doseBadge Configuration



The CR:110AIS doseBadge can be configured to meet the requirements of many different Occupational Noise and Industrial Hygiene Regulations and Guidelines.

The Dual Channel capability allows the doseBadge to be used, for example, where there is a requirement to measure noise exposure in accordance with both OSHA and ISO standards.

Please ensure that the RC:110A Reader Unit is configured for the correct functions and parameters before making measurements with the doseBadge.

The dBLink3 software can be used to configure the doseBadge and Reader unit to meet these requirements. Please refer to the dBLink3 software for further information.

## doseBadge Battery Performance



The NiMH rechargeable battery within the CR:110AIS doseBadge is designed to be recharged using the supplied battery chargers. Do not attempt to charge the doseBadge battery by any other means.#

## Recharging the battery



Ensure that the instructions detailed in this manual are followed carefully when charging the doseBadge units. To ensure optimum operation, the doseBadge may be left on trickle charge when not in use.

## Storage of the doseBadge



The doseBadge should be stored in a fully charged state. If the CR:110AIS doseBadge is not used for 1 hour, it will shutdown and go into sleep mode.

To wake the doseBadge from the Sleep mode, shake the doseBadge until the indicator light shows. Refer to **“Shake-to-Wake” function** on **Page 25** for detailed information about this function.

The “Shake to Wake” function has been added to the CR:110AIS doseBadge to ensure that a doseBadge that is not in use powers down to the minimum possible power consumption.

The doseBadge should be kept on the charger unit when not in use to ensure optimum performance. The doseBadge should be charged at least every 14 days to maintain this optimum performance.

## Battery Operating Life



The doseBadge system should be returned to Cirrus Research plc for calibration and servicing. During this calibration and service, the performance of the internal battery will be verified.

## Installing the doseBadge Software

The doseBadge system is supplied with the NoiseTools software program.

NoiseTools is a program that allows measurements to be downloaded from the RC:110A Reader unit to a PC. The NoiseTools software automatically recognises an RC:110A Reader unit and allows measurements to be downloaded.



NoiseTools Is supplied on a CD-ROM and requires a PC running Microsoft XP SP3 or later. Install the software before connecting the doseBadge Reader Unit to the PC.

To install the software:

1. Insert the Disc in the CD-ROM drive
2. Follow the instructions on the screen

If the installation program does not automatically start, run d:\setup.exe program from the Start, Run option in the task bar where d is the letter of the CD-ROM drive.

---



Please note that if you are running on a network, you may need to contact your network administrator to ensure that you have sufficient access rights to install this software.

This software should be installed with full administration rights to ensure that the configuration of the software can be completed.

Cirrus Research plc accepts no responsibility for the installation of this software on systems where full access rights are not available.

---

## Section 1 Introduction

Thank you for purchasing the doseBadge Personal Noise Dosemeter System from Cirrus Research plc.

The doseBadge is a unique solution to the problems associated with the measurement of Personal Noise Exposure. The doseBadge itself has no controls or cables which means that the unit can be used in situations where the wearer is working in confined spaces or where there is a risk of a cable being caught in machinery.

Measurements are downloaded from the doseBadge to a Reader unit via an infra-red link which removes the need for keys or controls on the instrument.

This version of the doseBadge, the CR:110AIS and the RC:110A Reader Unit, provide a range of configuration options which allow the system to be used to measure and record noise levels to most Occupational Noise and Industrial Hygiene Regulations.

The CR:110A doseBadge and RC:110A Reader Unit, when used with the dBLink3 software, provide Dual Channel Measurements.

Channel 1 can be configured to be any combination of the Exchange Rate (Q), Criterion Level (CL), Criterion Time (CT), Threshold (TH) and Time Weighting (TW). Channel 2 is preset to a 3dB ISO configuration as shown below:

Parameter	Configuration Options	
	Channel 1	Channel 2
Exchange Rate (Q)	3dB, 4dB or 5dB	3dB
Criterion Time	8hrs, 12hrs, 16hrs or 18hrs	8 hours
Criterion Level	80dB, 85dB or 90dB	85dB
Threshold	None, 80dB or 90dB	None
Time Weighting	None or 'S' (Slow)	None

A system can be started with a single doseBadge and a Reader unit, and expanded by purchasing additional doseBadges and the appropriate number of charging units. A range of additional external charging units allow a system to be expanded simply and easily without any of the components becoming obsolete.

This manual describes the operation of the CR:110AIS doseBadge unit and RC:110A doseBadge Reader.

Also described are the optional RC:101A Keyfob Remote Control and the UA:110 Windshield. The Keyfob allows the doseBadge to be started and stopped without the RC:110A unit, and should be ordered separately.

Please note that the RC:110A Reader unit supports all previous versions of the doseBadge Personal Noise Dosemeter. However some features and functions may not be available when using the RC:110A Reader with previous versions (CR:100A or CR:100B) of the doseBadge.

Please refer to "Checking the Configuration" on page 21 and "Configuration of the Measurement Parameters" on page 42 for more information. Also refer to Section 7 "**Troubleshooting**" on page 56.

## How the doseBadge works



The doseBadge is controlled by the Reader unit through an infrared link. The link between the doseBadge and the Reader is used to send information in a similar way to a television remote control.

The RC:101A Keyfob also provides a method to start and stop the doseBadge without using the Reader unit. Please note that the RC:101A Keyfob is **not** certified as Intrinsically Safe.

Each doseBadge contains a rechargeable battery which powers the unit throughout the measurement period. Each charge of the battery is designed for one measurement.

The battery contains sufficient power to carry out a single measurement for over 20 hours although the doseBadge will run for longer provided the battery is fully charged. This figure however may decrease over the life of the battery pack.

### **doseBadge System Configuration**

The version of the CR:110A doseBadge provides Dual Channel measurements.

Channel 1 of the doseBadge can be configured by the user as required with Channel 2 providing a fixed measurement as described below.

The doseBadge system can be configured in different ways to suit the requirements of different markets and measurements standards.

The different configuration options and possible settings are listed below:

Parameter	Configuration Options	
	Channel 1	Channel 2
Exchange Rate (Q)	3dB, 4dB or 5dB	3dB
Criterion Time	8hrs, 12hrs, 16hrs or 18hrs	8 hours
Criterion Level	80dB, 85dB or 90dB	85dB
Threshold	None, 80dB or 90dB	None
Time Weighting	None or 'S' (Slow)	None

All of these configuration options can be selected from the RC:110A Reader Unit. In addition, the dBLink<sup>3</sup> software allows user defined configurations to be loaded into the Reader Unit. The software includes preset configurations such as ISO, OSHA, ACGIH and US ACHPPM.




Please note that although the RC:110A Reader unit can be used to control the previous CR:100A and CR:100B doseBadges, if the user attempts to program an older doseBadge with a configuration that is not supported, an error message will be displayed when the doseBadge is reset or data is read from the doseBadge.

## Section 2 Layout & Controls

### RC:110A Reader Unit

The figure below shows the layout of the RC:110A Reader Keypad.

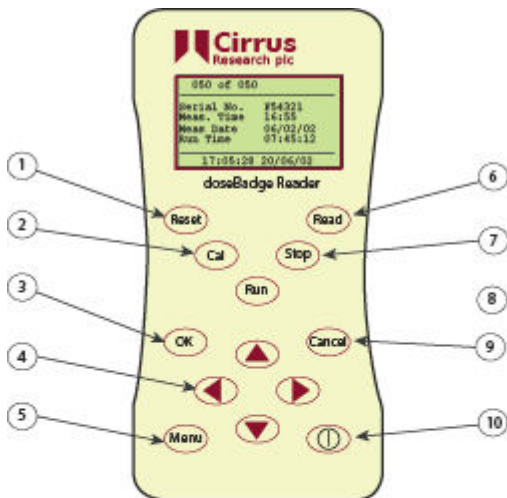


The RC:110A Reader unit has an integral Acoustic Calibrator that has been specifically designed to suit the unique shape and performance of the doseBadge. The Acoustic Calibrator is located on the top of the Reader unit.

Next to the Acoustic Calibrator is the InfraRed Port which is used to communicate with the doseBadge.

The battery compartment is located on the rear of the Reader unit. The USB connector which is used to download data to a PC is located on the bottom of the Reader unit below the battery compartment.

- |               |  |
|---------------|--|
| 1. Reset      | Resets the doseBadge                             |
| 2. Cal        | Calibrates the doseBadge                         |
| 3. OK         | Accepts changes & selects menu options           |
| 4. Arrow Keys | Select/Change/Data Entry                         |
| 5. Menu       | Displays the Reader Menu                         |
| 6. Read       | Reads data from the doseBadge to the Reader Unit |
| 7. Stop       | Stops the doseBadge                              |
| 8. Run        | Starts the doseBadge                             |
| 9. Cancel     | Cancel Changes/Exit from Menu                    |
| 10. Power     | Switches the Reader Unit On & Off                |

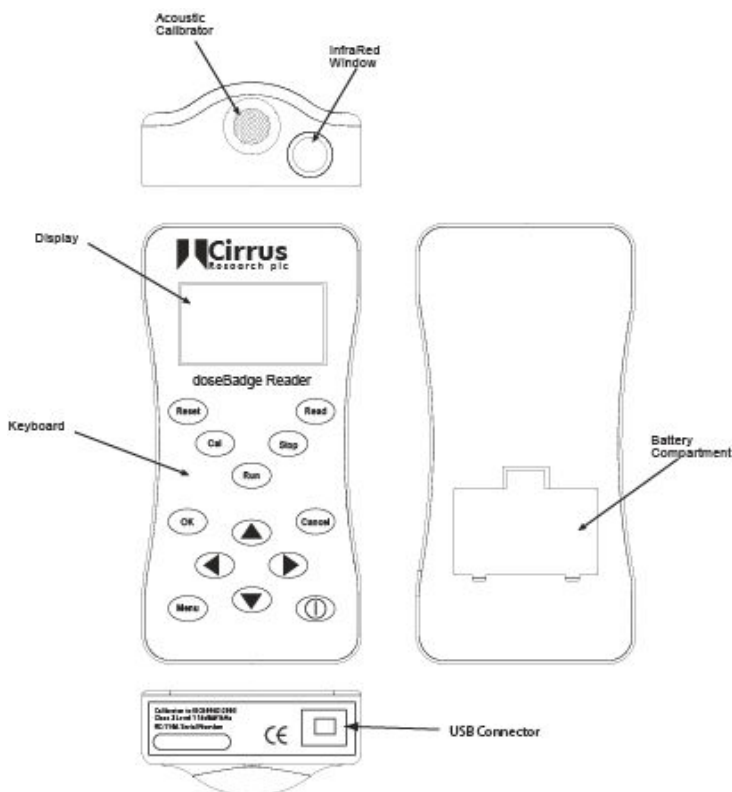


**CR:110AIS dosebadge**

The layout of the CR:110AIS doseBadge is shown on the right.


The microphone capsule is mounted in the top of the doseBadge in a shock mount to reduce the noise generated from movement or handling of the case.

The doseBadge is controlled via an InfraRed link to the Reader unit. Behind the InfraRed window are the transmitter and receiver for communication with the Reader.

The charging point for the doseBadge is on the bottom in the centre and this is also used for the mounting of the doseBadge.

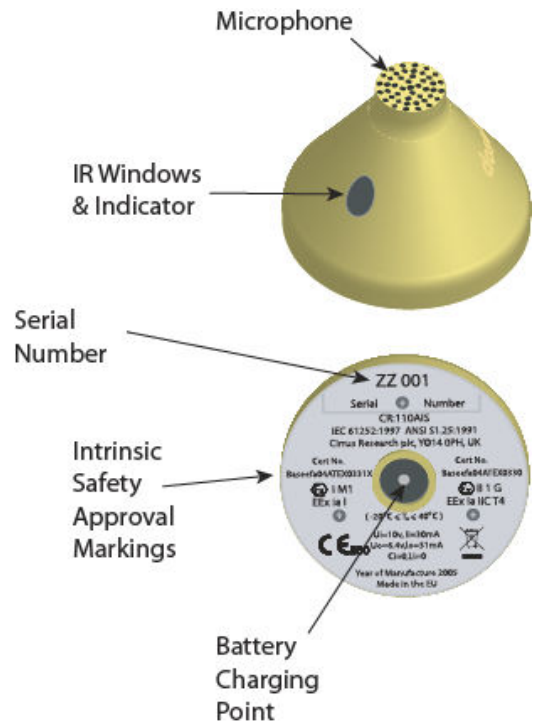

**RC:101A Keyfob Remote Control**

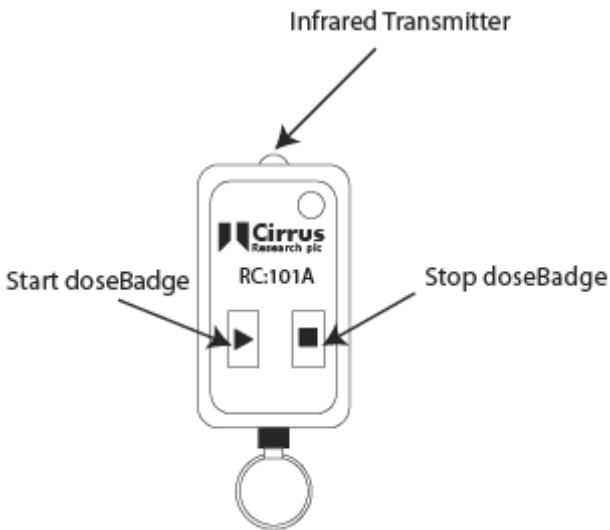

The RC:101A Keyfob Remote control is designed to start and stop the doseBadge.

The Start and Stop buttons are used to send commands to the doseBadge. When the Start or Stop buttons are pressed, the Status indicator will light to show that the button has been pressed.

The InfraRed signal is sent from the transmitter on the front of the Keyfob. Ensure that this transmitter is kept clean.

If a button is pressed and the Status Indicator does not show, the battery may need to be replaced.


## CU:110A Charger Unit

The CU:110A Charger Unit replaces all previous versions of the doseBadge chargers and is compatible with all versions of the doseBadge.

The charger has a number of new and important features which are different from the previous CU:100, CU:101 and CU:102 Chargers Units.

### Important Features

- The maximum charge time is 2½ hours for a completely flat doseBadge. For a doseBadge that has a partially charged battery, the charge time will be much shorter
- The CU:110A Charger Unit always charges, ie there is no automatic discharge function
- The CU:110A is compatible with all previous versions of the doseBadge
- The CU:110A has a Discharge/Charge cycle button on the bottom of the unit to allow for the doseBadges to be fully discharged and recharged. This can be used where the doseBadges will not be used for more than 28 days (see page 53 for details)
- Charger Units can be “daisy chained” to allow 10 doseBadges to be charged

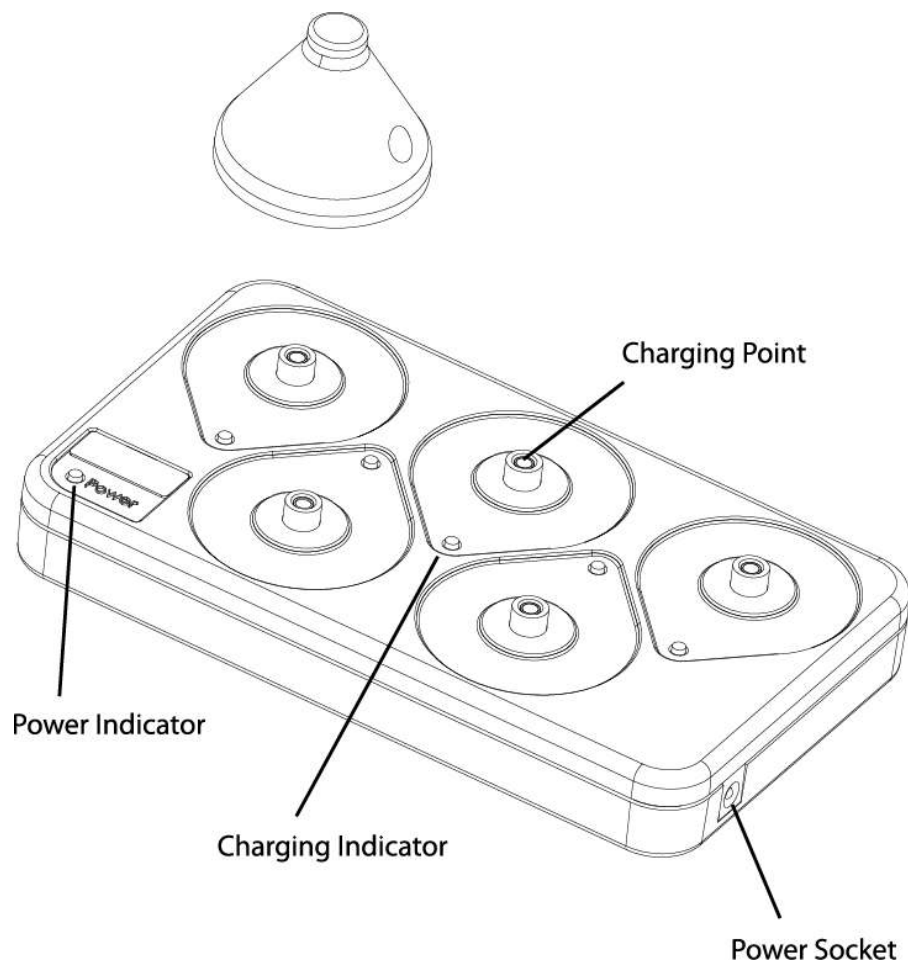

## Section 3 Getting Started



The CR:110AIS doseBadge is controlled by the RC:110A Reader Unit. The RC:110A Reader Unit **does not** carry intrinsic safety certification and therefore must not be used in hazardous zones. The CR:110AIS doseBadge **must be** started, stopped, read, calibrated and charged outside of any areas designated as hazardous.

### Quick Start

There are different ways to use a doseBadge and Reader. The following simple instructions should be followed to carry out personal sound exposure measurements using a single CR:110AIS doseBadge and RC:110A Reader. Ensure that you have read all of the instructions and information contained in this manual before operating the equipment.

The basic operations are:

<b>Function</b>	<b>for more information see page:</b>
• Ensure the doseBadge battery has been fully charged.	18
• Wake the doseBadge if it has not been used for 1 hour or longer	25
• Check configuration of doseBadge user the Reader menu	21
• Push the doseBadge into the calibration cavity on the Reader.	26
• Reset the doseBadge using the <b>Reset</b> key.	27
• Calibrate the doseBadge using the <b>Cal</b> key.	28
• Remove the doseBadge from the calibration cavity and attach it to the wearer.	29
• Start the session using the <b>Run</b> key or by using the Run key of the Keyfob unit.	32
• At the end of the shift, stop the session using the <b>Stop</b> key or use the Stop key of the Keyfob unit.	33
• Remove the doseBadge from the wearer and push into the calibration cavity on the Reader.	34
• Perform a second calibration check using the <b>Cal</b> key.	34
• Transfer the doseBadge session data to the Reader using the <b>Read</b> key.	35
• View the results	36
• Download measurements to the software	36

### Unpacking the instrument for the first time

Carefully remove all of the components of the doseBadge system from the shipping container or carrying case and inspect it for possible damage or missing items. If there appears to be damage or something is missing, contact Cirrus Research plc or your local representative immediately.

Each CR:110AIS doseBadge is supplied with an SP:131 Mounting Kit which contains the following components:

- ! Round Black Mounting Plate with Brushed Stainless Steel metal insert
- ! Mounting Clip System

No other mounting system or mounting accessories are to be used with the CR:110AIS doseBadge. The RC:110A Reader Unit is supplied with the following accessories:

- USB Cable
- doseBadge Software CD
- Operating Manuals
- Certificates of Calibration

Please check that any other components that you have ordered are included with your equipment.

---

## Charging the doseBadges



Please note that this manual refers to the CU:110A Charger Unit only. The information given does not apply to any previous version of the CU Charger Units. The CU:110A is identified by a Black Case with the older charger units having a White Case.

The CU:110A Charger Unit has a maximum charge time of 2½ hours. If the doseBadge is not fully discharged, the charge time will be shorter than this.

It is essential that this procedure is carefully followed otherwise damage will occur to the doseBadge battery.


Before using the doseBadges for the first time, ensure that the units are allowed to charge fully. The doseBadges should be regularly recharged to maintain the performance of the battery pack (inside the doseBadge)

For further information regarding the charging and maintenance of the doseBadge, please refer to Page 52 "Maintenance & Care"

Connect the Charger to the mains power supply and switch on the power supply.

Ensure the doseBadge is in Stop Mode and carefully screw it onto the "charging stud" on a CU Series Charger unit.

Do not over tighten the doseBadge onto the Charger. The doseBadge should be screwed onto the charger until the indicator change status and then one more half turn.

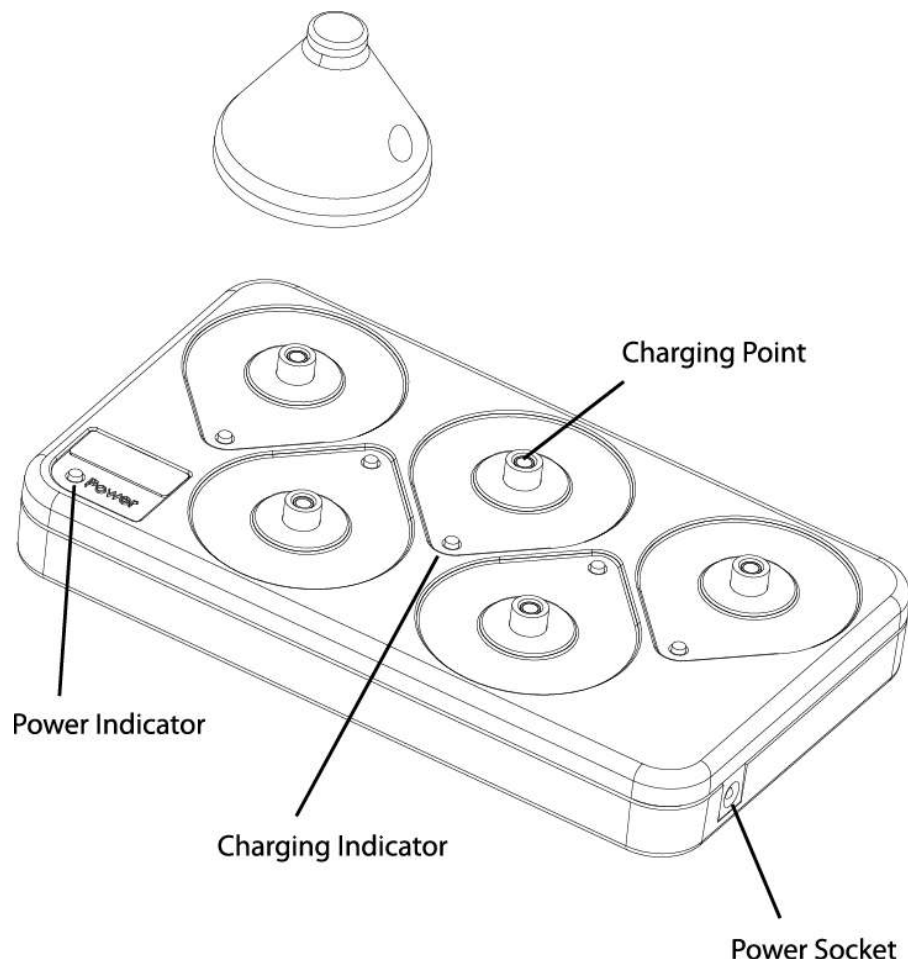

During the charge cycle, the green indicator will flash to show that the charging is in progress.

Once charging has finished, the green indicator stops flashing and remains on continuously.

At this time the doseBadge is receiving a trickle charge to keep it topped up. To ensure optimum operation, the doseBadge may be left on trickle charge when not in use.

### **Summary of Charger Indicators**

No Indicator	doseBadge Not Connected
Green LED Flashing	doseBadge Charging
Green LED On	doseBadge Charged

The CU:110A doseBadge Charger will display errors during charging if, for example, the doseBadge battery does not charge as expected. In this case, the Green LED will flash quickly to indicate the charging error.

### **Removing the power from the CU:110A Charger**

If the power is removed from the CU:110A Charger Unit and then reconnected, the charging cycle will restart.

However, if the batteries in the doseBadges still contain charge when this occurs, the charging time will be shorter than the maximum 2½ hours charge time.

---

## Inserting the RC:110A Reader Batteries

The RC:110A Reader unit requires batteries to operate. The doseBadge contains a rechargeable battery pack which is not user replaceable.

The batteries for the RC:110A Reader unit are located under the black cover on the back of the instrument.


Before changing the main batteries, ensure that the Reader is switched off. The memory and clock of the Reader unit are protected when the main batteries are removed from the instrument.

The memory of the instrument is protected and the clock is kept for a maximum of 10 minutes.

Locate the battery compartment cover and remove it from the instrument. Remove the batteries from the Reader unit and replace with batteries of equivalent type and quality.

The battery should be of alkaline type AA (LR6 / AM3 / MN1500 / Mignon).

Ensure that the polarity of the batteries is correct. Replace the battery cover and switch the Reader unit on.

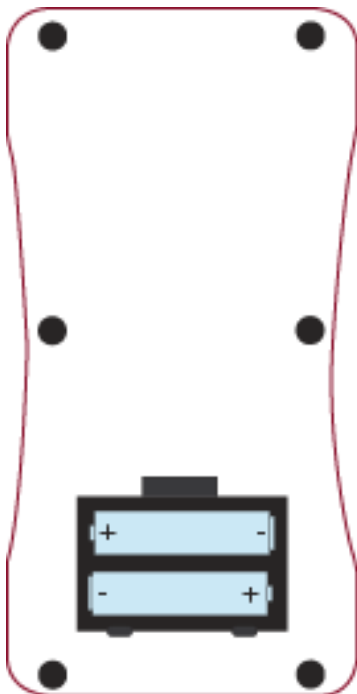


Remove the battery cover  
and replace the batteries.

Ensure the correct polarity  
when replacing the batteries

---

## Switching on the Reader Unit

Press the Power button on the Reader to switch on. The Reader will power on and will display the start screen.

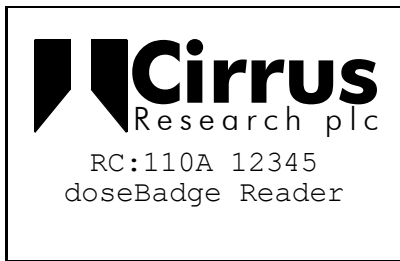

The Reader unit will automatically switch off after 4 minutes of inactivity.

The backlight of the display will switch on when any key pressed and will automatically switch off after 10 seconds to preserve battery power.

## Checking the configuration




Before making a measurement with the doseBadge system, ensure that the configuration of the parameters listed below are as required to meet the regulations or guidelines for which the measurement are being made.

Cirrus Research plc accepts no responsibility for the accuracy of measurements made where the configuration of the doseBadge and Reader unit is not correct for Local, National or International Regulations.

If you are in doubt about the correct settings for your system, please contact your local Cirrus Research representative or contact Cirrus Research plc directly.




Please note that the RC:110A Reader Unit will not allow a CR:100A or CR:100B doseBadge to be programmed with settings that are not compatible with these older instruments. If the user attempts to program a CR:100A or CR:100B doseBadge with an incorrect configuration, an error message will be displayed as shown below.

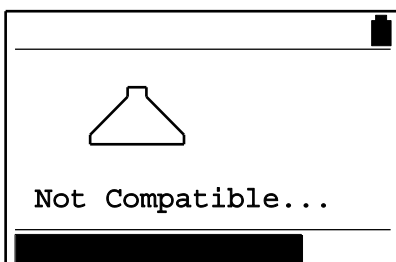

## Clock (Time & Date)

The RC:110A Reader unit has a clock and calendar which is used to stamp the measurement with the current time and date. It is vital that the time and date of the clock in the Reader unit is correct.

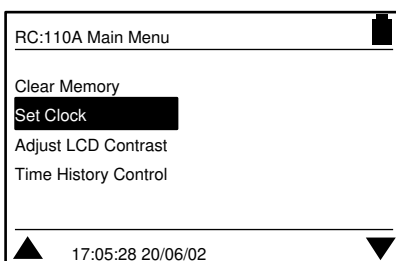


The current time and date is displayed at the bottom of the display. If the Clock has not been set, the Reader unit will show "Clock not set".

The current Time and Date are shown at the bottom of the display. If the Time and Date are not correct, press the OK button to enter the Clock Set menu.

The Time is set in the format hh:mm:ss and the Date is set in the format dd/mm/yy. For details of the procedure to set the clock, refer to section 4 **Configuration & Options**. This is the default configuration and can be changed in the dBLink3 software.

## Time History Measurement

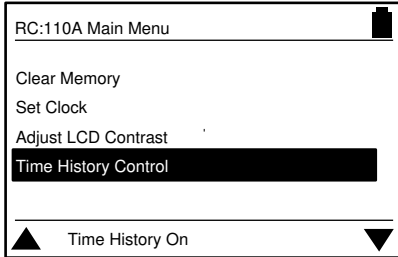

The Reader unit can be configured to download Time History data from the doseBadge at the end of the measurement.

The current setting for the Time History download is shown at the bottom of the screen. If the setting is not as required, the setting can be changed.

For details of the procedure to change the Time History storage function, refer to section 4 **Configuration & Options**.




Please note that the Time History data is stored as 1 Minute LAeq samples for 3dB Exchange Rates, and as 1 Minute Lavg samples for 4dB or 5dB samples.

Please note that this manual refers to the CR:110A doseBadge and RC:110A Reader Units that provide Dual Channel Measurement. The configuration options for the Criterion Time, Criterion Level, Threshold Level, Time Weighting and Exchange Rate detailed below apply to Channel 1. Channel 2 is preset with the following:

### Criterion Time (CT)

From the menu, select the Criterion Time position. The current setting is displayed at the bottom of the screen.

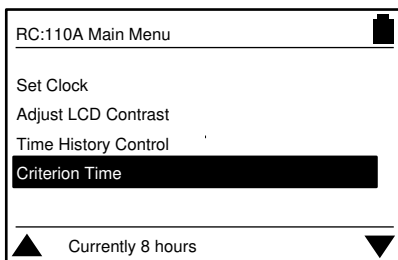


If the setting for the Criterion Time is not correct, the value can be selected from the list provided.

For further details of the procedure to change the Criterion Time, please refer to section 4, **Configuration & Options**.

The Criterion Time is programmed into the doseBadge when it is Reset by the Reader Reset key.

### Criterion Level (CL)

From the menu, select the Criterion Level position. The current setting for the Criterion Level is shown at the bottom of the screen.

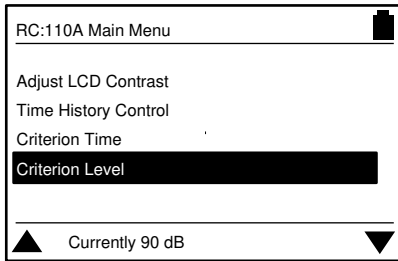


If the setting for the Criterion Level is not correct, the value can be selected from the list provided.

For further details of the procedure to change the Criterion Level, please refer to section 4, **A Configuration & Options**.

The Criterion Level is programmed into the doseBadge when it is Reset by the Reader Reset key.

### Threshold Setting (TH)

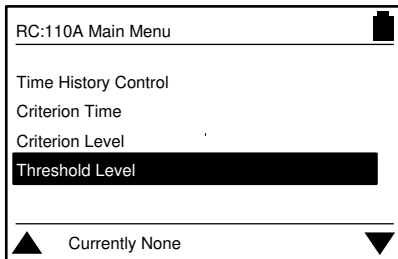


From the menu, select the Threshold Level position. The current setting for the Threshold Level is shown at the bottom of the screen. If the setting for the Threshold Level is not correct, the value can be selected from the list provided.

For further details of the procedure to change the Threshold Level, please refer to section 4, **A Configuration & Options**.

The Threshold Level is programmed into the doseBadge when it is Reset by the Reader Reset key.

### Time Weighting Setting (TW)

From the menu, select the Time Weighting position. The current setting for the Time Weighting is shown at the bottom of the screen.

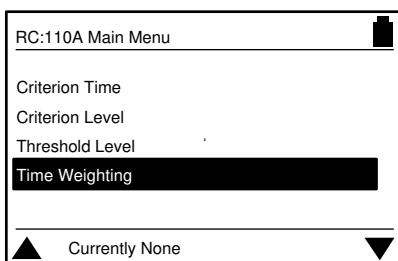


If the setting for the Time Weighting is not correct, the value can be selected from the list provided.

For further details of the procedure to change the Time Weighting, please refer to section 4, **A Configuration & Options**.

The Time Weighting is programmed into the doseBadge when it is Reset by the Reader Reset key.

### Exchange Rate Setting (Q)

From the menu, select the Exchange Rate position. The current setting for the Time Weighting is shown at the bottom of the screen.

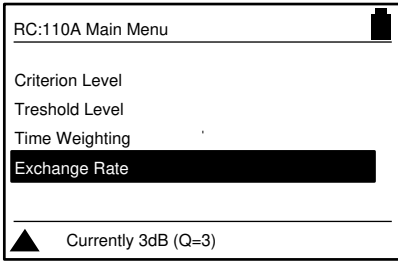


If the setting for the Exchange Rate is not correct, the value can be selected from the list provided.

For further details of the procedure to change the Exchange Rate, please refer to section 4, **Configuration & Options**.

The Exchange Rate is programmed into the doseBadge when it is Reset by the Reader Reset key.

### Dual Channel

The Dual Channel menu option allows the simultaneous measurement of Channel 1 and Channel 2 to be made.

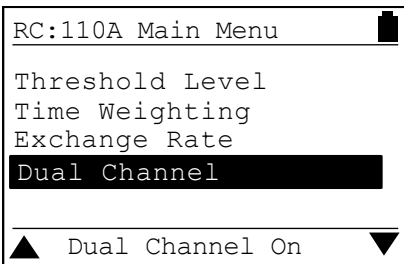


The options are to switch the Dual Channel Measurement On and Off.

It is recommended that this option is left switched ON.

### Dose Exceedence

The CR:110A doseBadge can indicate when the 100% Noise Dose value has been exceeded during the measurement.

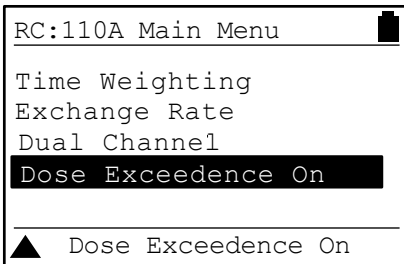

When this option is switched on, the LED indicator on the doseBadge will flash twice every second to indicate that the noise exposure has exceeded the 100% Dose value.

As the % Dose value is a cumulative value, once the indicator has started to flash more quickly it will continue to do so for the remaining measurement duration.



## “Shake to Wake” function



A new feature added to the CR:110AIS doseBadge is the “Shake to Wake” function. Please read the information below carefully before using the doseBadge.

In the CR:110AIS doseBadge, a function has been added to lengthen the battery life of the unit. If the doseBadge has not been used for 1 hour and it is not measuring data, it will go into Sleep mode. This reduces the amount of power required to run the doseBadge and a fully charged unit will remain charged and ready for use for up to 28 days.

**Shake the doseBadge in this direction  
to activate the sensor and wake  
the instrument**

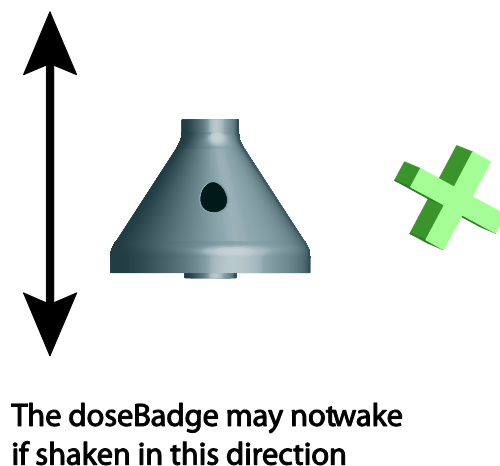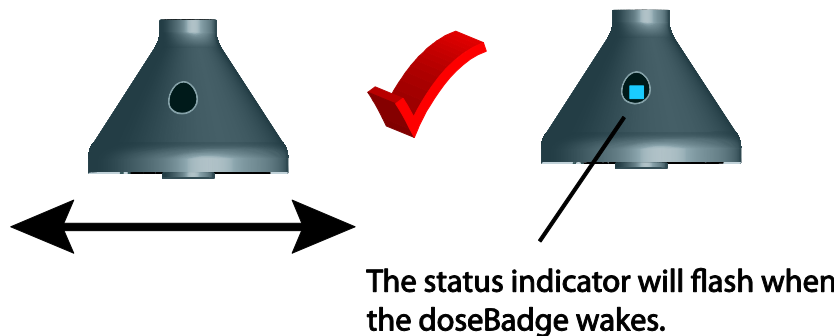

If the doseBadge is in Sleep mode, it will not communicate with the Reader Unit until it has been woken by physically shaking the doseBadge.

To check if the doseBadge is in Sleep mode point the Reader Unit at the doseBadge and press the Stop button. If the status indicator flashes (blue), the doseBadge is awake and can be used.

If the doseBadge does not respond, it is in Sleep mode and must be woken before use. The CR:110AIS doseBadge has an internal sensor that must be activated to wake the doseBadge from Sleep mode.

To wake the doseBadge, shake the unit as shown in the diagram below. When the sensor is activated, the doseBadge status indicator will flash (blue) twice and the doseBadge can be used.



Note that the sensor may be activated when the doseBadge is removed from the charger unit or when it is handled.

If the indicator light does not flash when the doseBadge is shaken, check that the doseBadge is not already awake by pointing the Reader Unit at the doseBadge and pressing the Stop button.

If the indicator shows, the doseBadge is awake and ready to use.



Please note that if the doseBadge is running, it will **not** go into Sleep mode. The doseBadge will only enter Sleep mode if it has been stopped for more than 1 hour and does not receive commands from the Reader unit.




Please note that if the internal battery in the doseBadge is not charged, it will not be possible to wake the doseBadge from Sleep mode. Ensure that the doseBadge is fully charged before attempting to use the unit.

### Insert the doseBadge in the Acoustic Calibrator

Before the doseBadge can be reset or calibrated, it must be inserted into the Acoustic Calibrator cavity to allow communication between the doseBadge and the Reader unit.

The figures here show the alignment of the doseBadge in the Reader cavity. Ensure that the InfraRed window of the doseBadge is aligned with the InfraRed Port of the Reader unit.

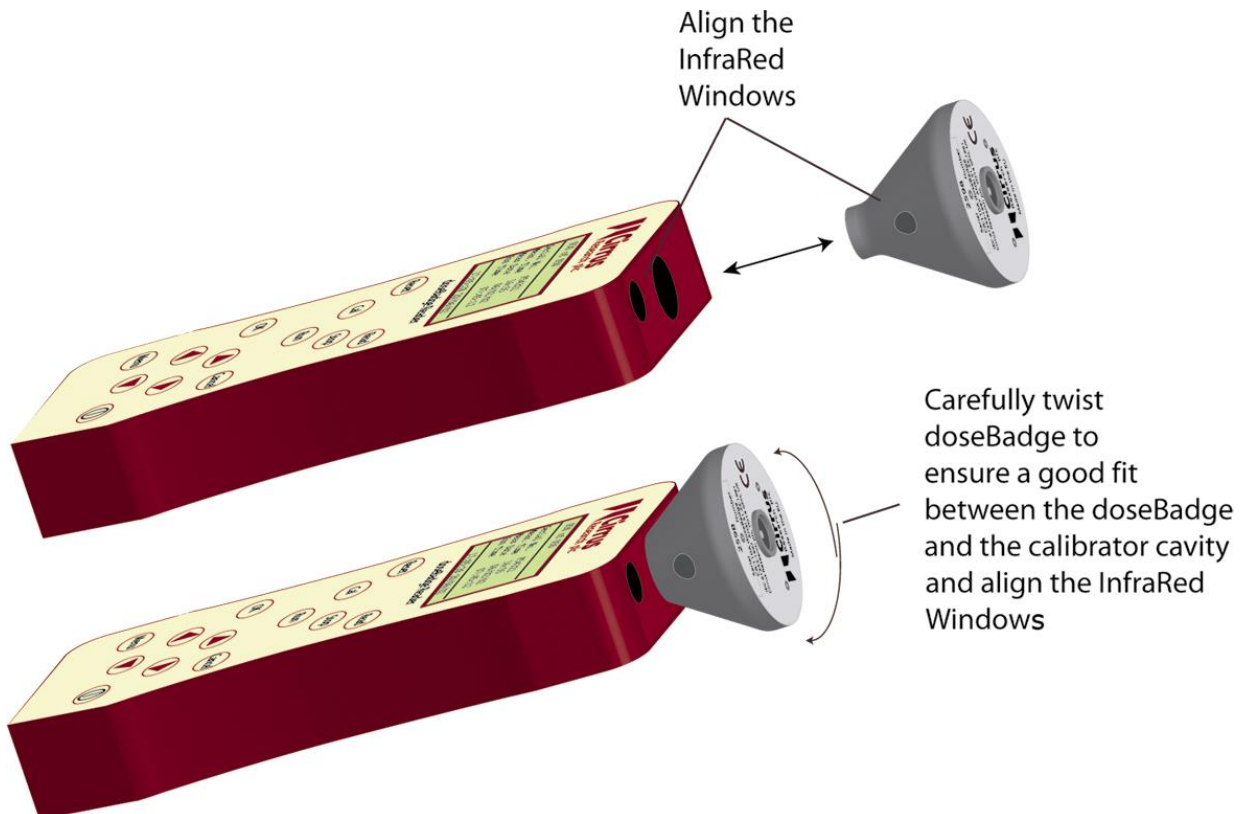


The doseBadge must be pushed firmly into the calibrator cavity to make sure that there is a good quality seal around the microphone. If the doseBadge is not pushed into the calibrator cavity, the acoustic calibration level will be reduced and the calibration will fail.


## Resetting the doseBadge




The doseBadge must be reset before a measurement is made. Resetting the doseBadge will clear any information from the doseBadge, program the doseBadge with the user configuration, set the date and time and prepare the unit for calibration.

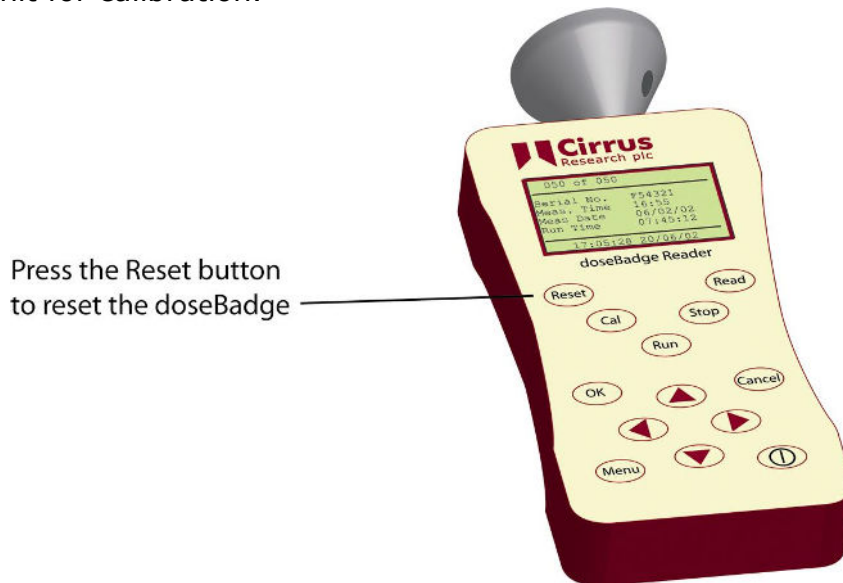

Press the Reset button to reset the doseBadge

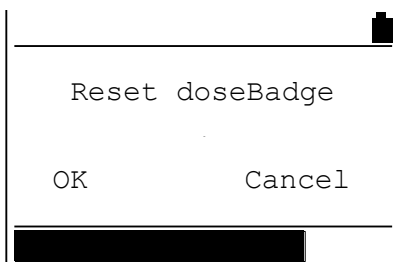

The Reader will communicate with the doseBadge and when the Reset is complete, the indicator on the doseBadge will flash twice. If there is an error, the Reader will indicate the problem.



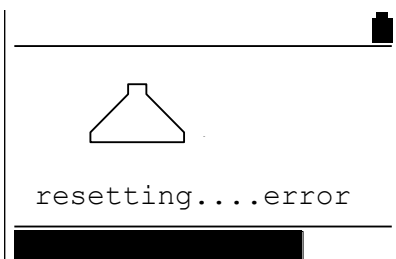


When the doseBadge is Reset, the configuration of the doseBadge as described above is programmed into the instrument by the Reader.

Press the OK or Cancel button to return to the main screen.

## Calibrating the doseBadge

The doseBadge must be calibrated before operation to ensure that the measurements are correct. To calibrate the doseBadge, press the **Cal** key.

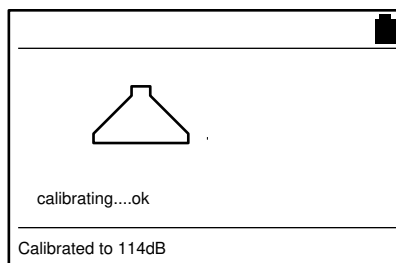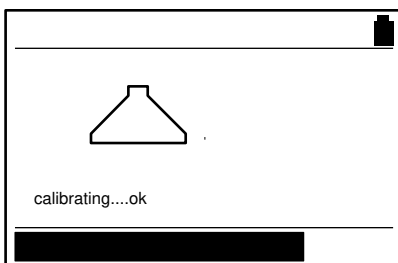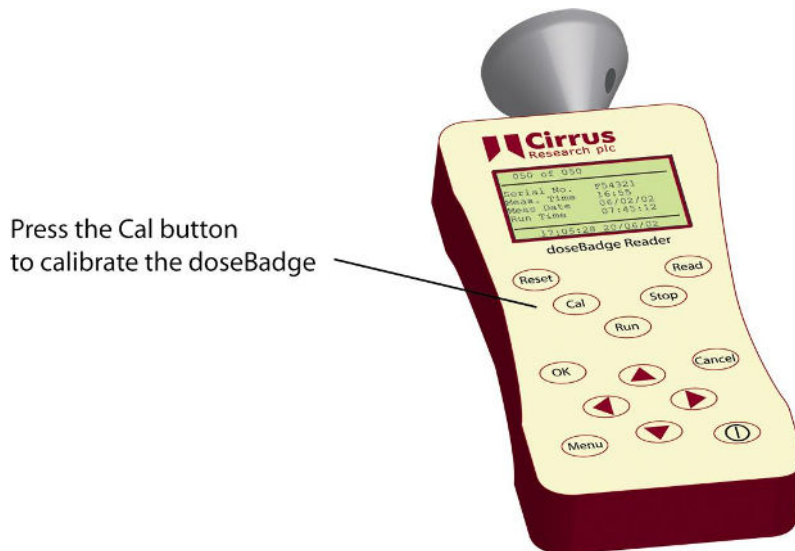

When the calibration is complete, the Reader unit will display the calibration information.

If the calibration of the doseBadge cannot be completed successfully, the Reader will display an error message. See Section 7 "Troubleshooting" for more details.

The Reader will display the calibration information until a key is pressed.

## Mounting the doseBadge




Please note that only the mountings supplied with the CR:110AIS should be used. Using any other mountings may invalidate the Intrinsic Safety Certification.

The round sealing baseplate with the round metal insert must be used. This baseplate seals the charging point of the doseBadge. The CR:110AIS is only approved for use in hazardous areas when the sealing baseplate is screwed onto the bottom of the doseBadge. Sealing baseplates without the 43mm Metal Disc are **not** approved and must not be used. ***The Sealing Baseplate must be used at all times.***



The doseBadge should be mounted to the wearer on the shoulder as shown above. Ensure that the doseBadge will not generate noise itself when the wearer moves.

The doseBadge window should be at the front to ease the starting and stopping of sessions using the infrared link with the Reader.

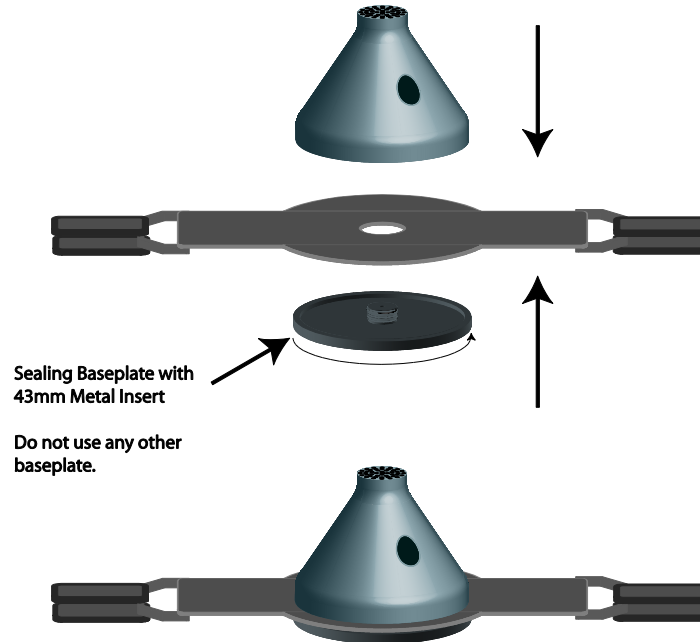


### Using the doseBadge Windshield

The optional UA:110 doseBadge Windshield can be used to reduce the effects of air movement upon the noise measurements. The windshield also reduces the effects of impacts upon the noise measurements which may cause false Peak(C) readings.

The windshield is secured between the doseBadge case and the mounting plate or patch. Ensure that the hole in the windshield is aligned with the infrared window of the doseBadge.

---

The UA:110 doseBadge windshield can also prevent dust ingress into the microphone capsule.

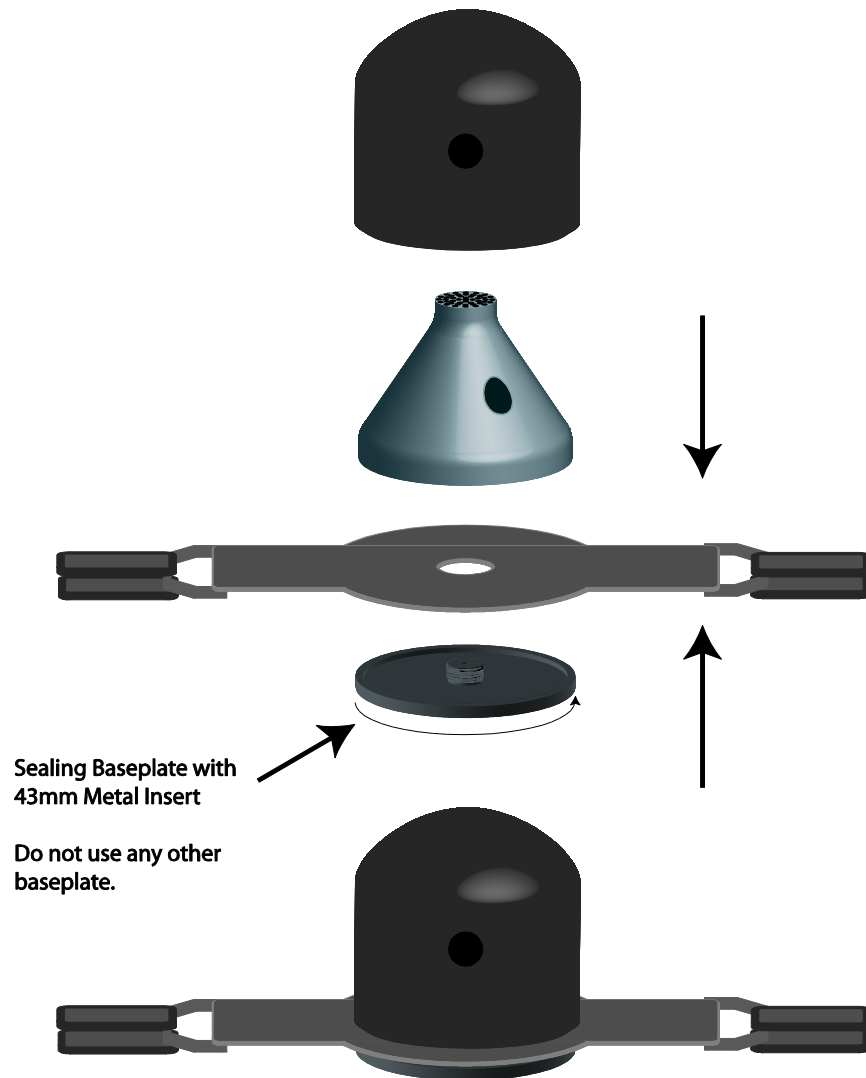


### Starting the measurement




The CR:110AIS doseBadge must be started outside of any hazardous area. The RC:110A Reader Unit and RC:101A Keyfob Remote Control are not approved for use in hazardous areas.

To start a measurement session, hold the Reader with the infrared link aimed at the infrared link window of the doseBadge. The Reader and doseBadge can be up to 50cm apart. Press the **Run** key. The Reader will program the start time and date into the doseBadge.

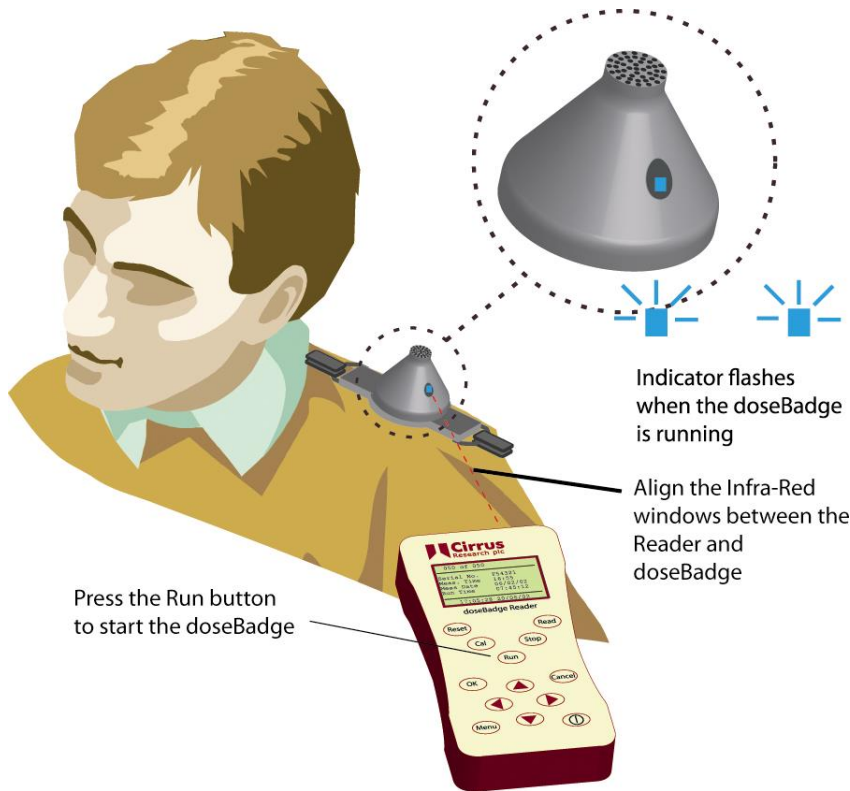

The Reader will show the status of the communication between the doseBadge and the Reader on the display.

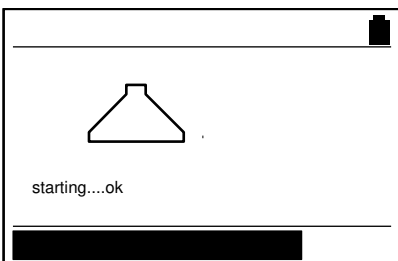

Do not move the Reader away from the doseBadge until the indicators show in the doseBadge.

An indicator will show in the badge window for up to 2 seconds to show that it has received the message and started running. If an indicator does not show then try again.

When the doseBadge is running (and making a measurement), the indicator will flash quickly to indicate that the unit is operating.

The doseBadge can now be left on the wearer. The wearer should be instructed to avoid knocking the badge as this can affect the Peak measurements and add to the noise dose.

## Using the RC:101A Keyfob Remote Control




The CR:110AIS doseBadge must be started outside of any hazardous area. The RC:110A Reader Unit and RC:101A Keyfob Remote Control are not approved for use in hazardous areas.


The doseBadge can also be started using the RC:101B Keyfob Remote Control. Point the Keyfob at the doseBadge infrared window and press the Run button. The doseBadge will start in the same way as described above for the Reader unit.

## Stopping a measurement

At the end of a measurement period, hold the Reader up to the doseBadge as shown above and press the **Stop** key.

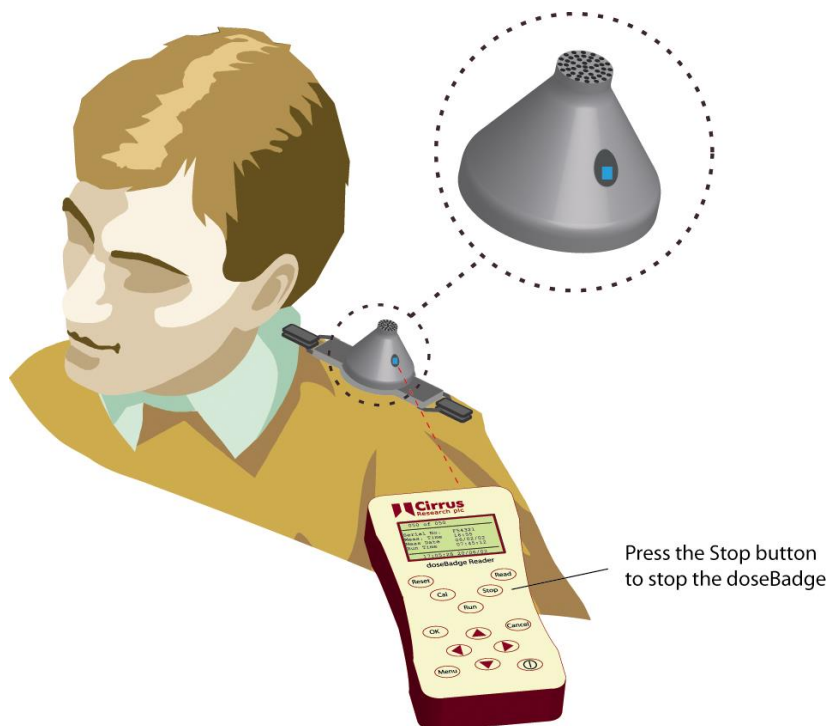

The Reader will show the status of the communication between the doseBadge and the Reader on the display.


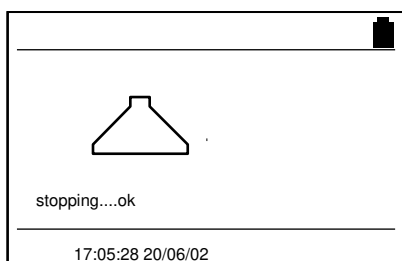


An indicator will flash through the doseBadge window to indicate the change from Run to Stop. Handling the doseBadge will now have no effect on the measurements and so the doseBadge can now be removed from the wearer.

The doseBadge can also be stopped using the RC:101A Keyfob Remote Control.

### Checking the Calibration of the doseBadge

The calibration of the doseBadge can be checked by removing the unit from the wearer and performing the same calibration procedure as described above. This records the second calibration value into the doseBadge. Insert the doseBadge into the Acoustic Calibrator on the Reader unit, ensuring that the InfraRed Port on the Reader is aligned with the InfraRed window on the doseBadge.

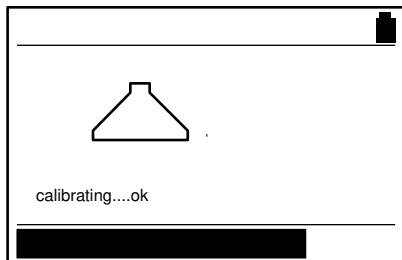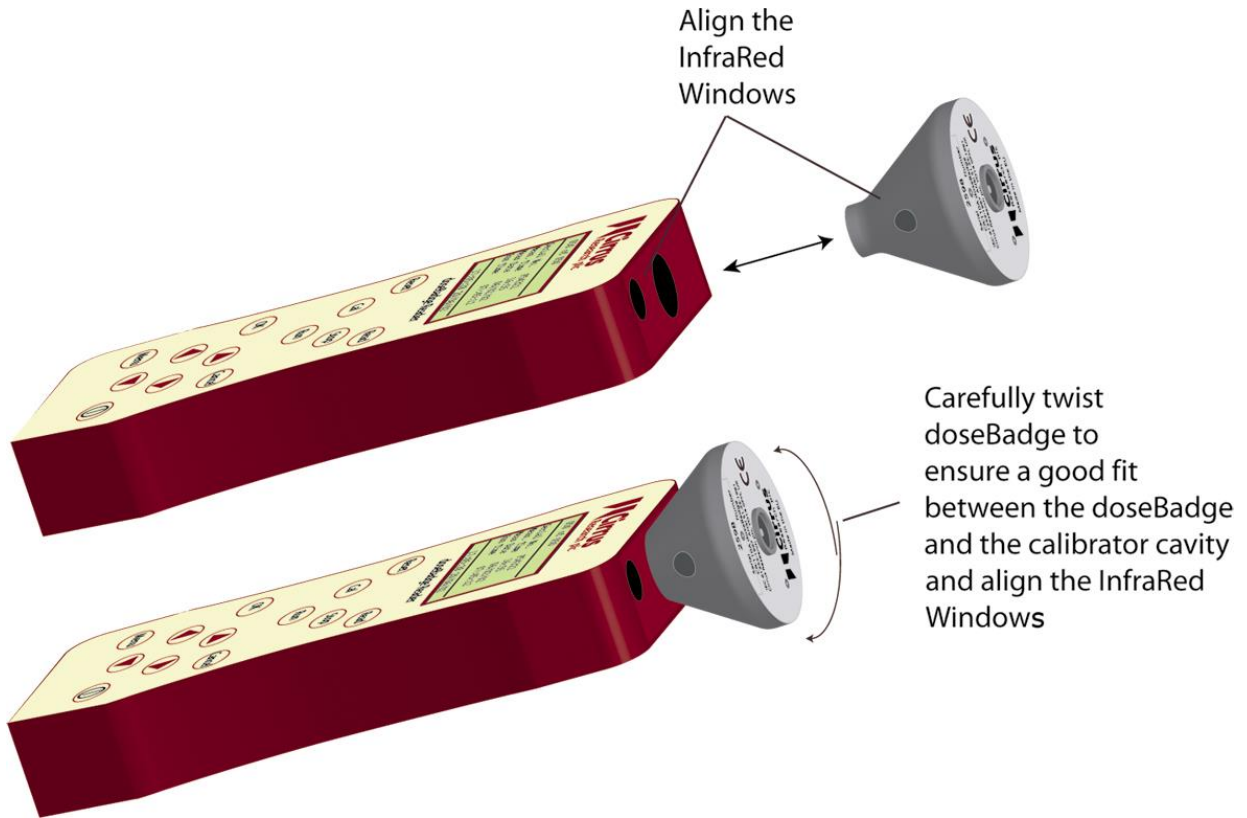

Press the **Cal** button to perform the second calibration.

The Reader will show the status of the communication between the doseBadge and the Reader on the display. The second calibration does not affect the measurement information and is used for information only.

The Reader will display the calibration information until a key is pressed.


## Downloading the measurements to the Reader Unit

The doseBadge must be in the Acoustic Calibrator cavity on the Reader before the measurements are downloaded.



If the Time History Measurement configuration has been set to Off, no Time History data will be downloaded from the doseBadge. Ensure that the Time History configuration is set to the required setting before reading measurement data from the doseBadge.

To download the measurement information from the doseBadge to the Reader, press the **Read** key. The Reader will display the status of the communication during the download period.

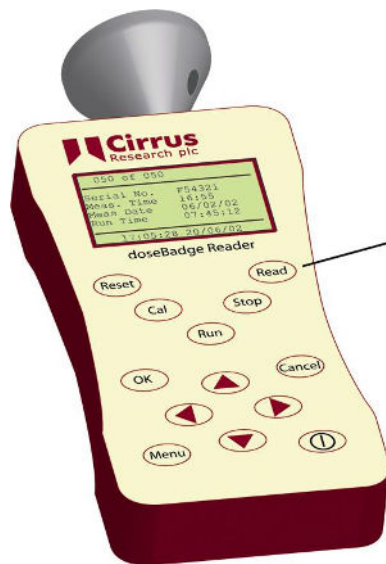

Press the Read button to download the measurement data from the doseBadge to the Reader

The Reader unit downloads the measurement parameters before downloading the Time History. If there are errors during the download of the Time History data, the Reader will store the measurement parameters and show the message "Trace Error" at the bottom of the display.

The measurement data is downloaded automatically from the doseBadge and is then displayed on the screen of the Reader Unit.

## **Viewing stored measurements**

When the measurement download has been completed, the Reader unit will display the last measurement data.

The different measurement parameters can be viewed by pressing the Down Arrow button. For further details, please refer to section 5 **Reviewing & Downloading Measurements**.

## **Downloading stored measurements to the doseBadge software**


Measurements can be downloaded from the Reader unit to the doseBadge software supplied with the RC:110A Reader Unit. If the dBLink3 and dBase Database programs have been installed, connect the Reader unit using the supplied USB cable to the PC. The dBLink3 software will automatically connect to the Reader and the measurement information can be downloaded.

Please refer to the help provided with the dBLink and the dBase Database for details of the download procedure. Refer to section 5 **Reviewing & Downloading Measurements** for details of connecting the Reader to a PC.

---

## Section 4 Configuration & Options

### RC:110A Reader Keypad

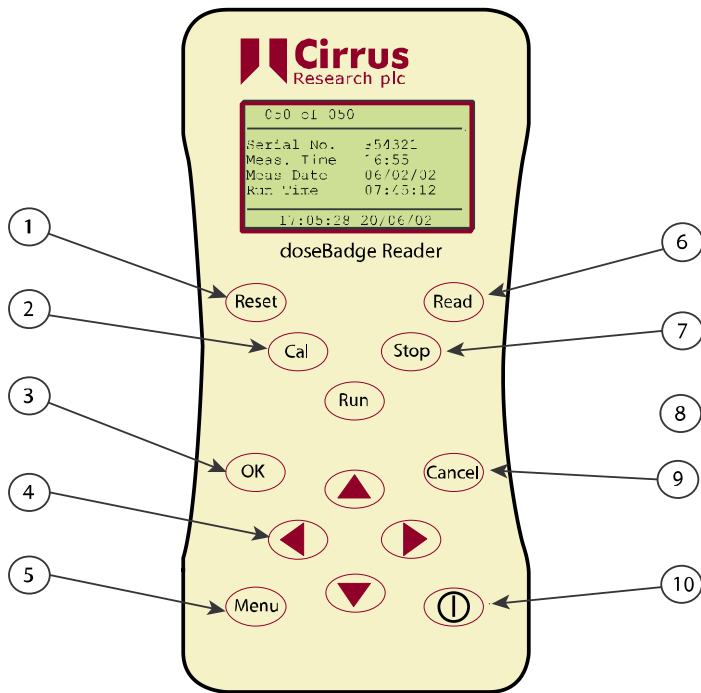

- |               |  |
|---------------|--|
| 1. Reset      | Resets the doseBadge                             |
| 2. Cal        | Calibrates the doseBadge                         |
| 3. OK         | Accepts changes & selects menu options           |
| 4. Arrow Keys | Select/Change/Data Entry                         |
| 5. Menu       | Displays the Reader Menu                         |
| 6. Read       | Reads data from the doseBadge to the Reader Unit |
| 7. Stop       | Stops the doseBadge                              |
| 8. Run        | Starts the doseBadge                             |
| 9. Cancel     | Cancel Changes/Exit from Menu                    |
| 10. Power     | Switches the Reader Unit On & Off                |

The keypad of the RC:110A Reader unit has the following keys as shown in the figure above:

- |                |  |
|----------------|--|
| (1) Reset      | Resets the doseBadge. All information in the doseBadge is deleted and the configuration data programmed.                             |
| (2) Cal        | Calibrates the doseBadge using the internal Acoustic Calibrator. This key is also used for the second calibration check if required. |
| (3) OK         | Accepts data entry or confirms menu options.   |
| (4) Arrow Keys | Allows the user to move around the menus and information shown on the display.   |
| (5) Menu       | Displays the menu options.   |
| (6) Read       | Downloads the measurement information from the doseBadge to the Reader.  |
| (7) Stop       | Stops the doseBadge measurement  |
| (8) Run        | Starts the doseBadge measurement   |
| (9) Cancel     | Exits from the menu options.   |
| (10) Power     | Switches the Reader on and off. The Reader will automatically switch off after 2 minutes of inactivity.                              |

**Menu Structure**

The menu system of the RC:110A Reader unit is entered by pressing the Menu key. The menu system can be exited by pressing the Cancel key at any time. The layout of the menu system is shown below:

---




000 of 000 No Measurements 17:05:28 20/06/07	001 of 010 Serial No. F54321 Meas. Time 16:55 Meas Date 06/02/07 Run Time 07:45:12 17:05:28 20/06/07
RC:110A Main Menu Clear Memory Set Clock Adjust LCD Contrast Time History Control ▲ 10 Measurements ▼	Clear Memory Options Exit Clear Memory ▲
RC:110A Main Menu Clear Memory Set Clock Adjust LCD Contrast Time History Control ▲ 17:05:28 20/06/07 ▼	Set the Current Time 17:06:27 20/06/07 hh:mm:ss dd/mm/yy ▲ 17:05:28 20/06/07 ▼
RC:110A Main Menu Clear Memory Set Clock Adjust LCD Contrast Time History Control ▲ ▼	Adjust LCD Contrast Lighter Darker ▲ ▼
RC:110A Main Menu Clear Memory Set Clock Adjust LCD Contrast Time History Control ▲ Time History On ▼	Time History Control Time History Off Time History On ▲
RC:110A Main Menu Set Clock Adjust LCD Contrast Time History Control Criterion Time ▲ Currently 8 hours ▼	Select Criterion Time 8 hours 12 hours 16 hours 18 hours ▲
RC:110A Main Menu Adjust LCD Contrast Time History Control Criterion Time Criterion Level ▲ Currently 90 dB ▼	Select Criterion Level 80 dB 85 dB 87 dB 90 dB ▲
RC:110A Main Menu Time History Control Criterion Time Criterion Level Threshold Level ▲ Currently None ▼	Select Threshold None 80 dB 85 dB 90 dB ▲ ▼
RC:110A Main Menu Criterion Time Criterion Level Threshold Level Time Weighting ▲ Currently None ▼	Select Time Weighting None Slow ▲ ▼
RC:110A Main Menu Criterion Level Threshold Level Time Weighting Exchange Rate ▲ Currently 3dB (Q=3) ▼	Select Exchange Rate 3dB (Q=3) 4dB (Q=4) 5dB (Q=5) ▲ ▼
RC:110A Main Menu Threshold Level Time Weighting Exchange Rate Dual Channel ▲ Dual Channel On ▼	Dual Channel Dual Channel Off Dual Channel On ▲ ▼
RC:110A Main Menu Time Weighting Exchange Rate Dual Channel Dose Exceedence On ▲ Dose Exceedence On ▼	Dual Channel Dose Exceedence Off Dose Exceedence On ▲

### Clear the memory of the Reader

The RC:110A Reader has a memory of 192kB which allows a large number of measurements to be stored. Please refer to the Specification for full details of the memory available.




The memory of the RC:110A Reader unit can be cleared when required. Please ensure that all measurements have been downloaded to the doseBadge Database before clearing the memory.

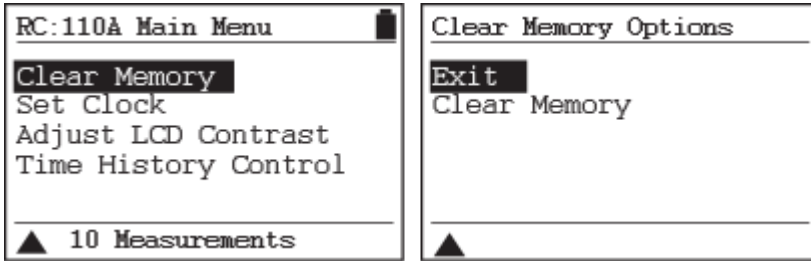

To clear the memory, access the menu by pressing the Menu button and select the Clear Memory option.

### Set Clock

The RC:110A Reader unit has a clock and calendar which is used to stamp the measurement with the current time and date. It is vital that the time and date of the clock in the Reader unit is correct. To check the current time and date, press the menu button to enter the menu options. If the Reader time and time is not set then the display shows "Please set clock"

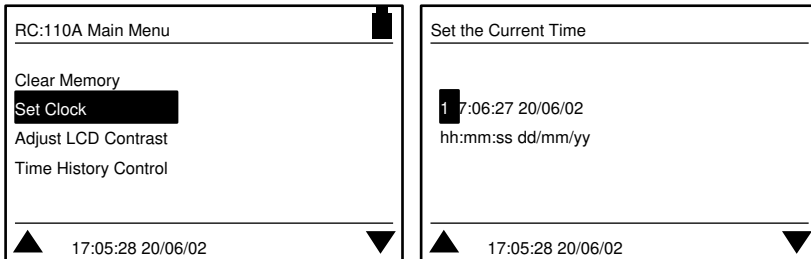


The current Time and Date are shown at the bottom of the display.

If the Time and Date are not correct, press the OK button to enter the Clock Set menu.

The default time format in the Reader Unit is hh:mm:ss and the default date format dd/mm/yy. However, the dBLink3 software allows the user to change these to suit the country where the doseBadge will be used. Please refer to the dBLink3 software for further details.

### Adjust Display Contrast


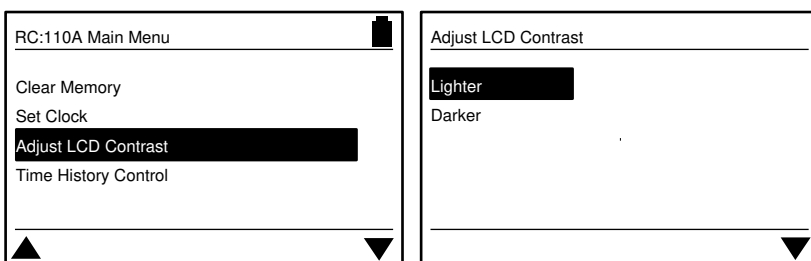


The contrast of the LCD display can be adjusted to accommodate different ambient light conditions. To change the contrast of the LCD display, press the OK key on

either the Lighter or Darker options.

## Time History Measurement Mode

The doseBadge system can be configured to download Time History data from the doseBadge at the end of the measurement. The Time History data download can be selected to be either On or Off as required.

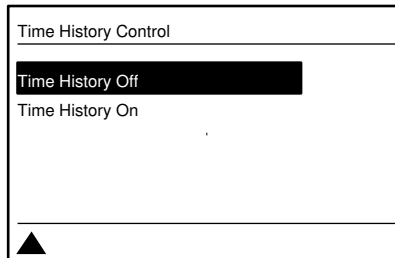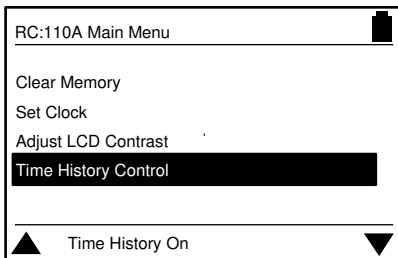

Please note that selecting the On option will increase the download time over the No Time History option.

The current setting for the Time History download is shown at the bottom of the

screen. If the setting is not as required, the setting can be changed.



In the Dual Channel version of the CR:110A doseBadge, the Time History data for Channel 2 is always stored as a 1 minute LAeq samples.

For Channel 1, when the Exchange rate is set to 3dB, the Time History data is stored as 1 Minute LAeq samples. When the exchange rate is set to 4dB or 5dB, the Time History data is stored as 1 Minute L<sub>AVG</sub> samples.

In addition, the 1 Minute Peak(C) level and 1 Minute doseBadge Battery level are also stored and downloaded and stored as a Time History.. These two parameters are not displayed on the Reader unit and are only available via the dBLink3 software.

The data stored can be viewed in the dBLink3 software and the doseBadge Database programs. Please refer to these software programs for details of the data storage type.

Also refer to the Troubleshooting guide on page 56 for further information.

## Configuration of the Measurement Parameters

The CR:110AIS doseBadge, when used with the RC:110A Reader Unit, allows configuration of several different measurement parameters which can be adjusted to meet the requirements of Local, National or International Standards as required.

The version of the doseBadge referred to in this manual provides Dual Channel measurements. Channel 2 is preset to a 3dB ISO configuration and cannot be altered by the user.

The following parameters can be configured for Channel 1 as required.


- X Criterion Time
- X Criterion Level
- X Threshold Level
- X Time Weighting
- X Exchange Rate

Please note that any changes of the doseBadge configuration will only be programmed into the doseBadge when it is Reset by the Reader unit.

The Glossary on page 59 provide additional information about these different parameters.



Please note that the RC:110A Reader Unit will not allow a CR:100A or CR:100B doseBadge to be programmed with settings that are not compatible with these older instruments. If the user attempts to program a CR:100A or CR:100B doseBadge with an incorrect configuration, an error message will be displayed as shown below.

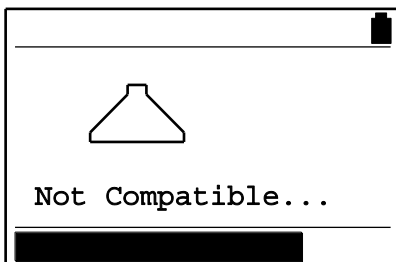


### Criterion Time (CT)

The Criterion Level, displayed as CT by the Reader unit, is used by the doseBadge system for the calculation of the following measurement functions:

- $L_{EP,d}$  or TWA
- % Noise Dose
- Estimated % Noise Dose

To check the setting for the Criterion Time (CT), press the menu button and select the Criterion Time option. The current setting for the Criterion Time is shown at the bottom of the screen.

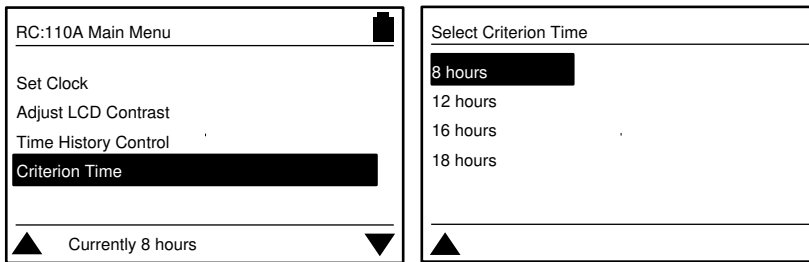

By default, the Criterion Time is set to 8 hours. The Criterion Time can be selected from the following durations:

- 8 hours
- 12 hours
- 16 hours
- 18 hours

If the setting for the Criterion Time is not correct, the value can be selected from the list by pressing the OK button and selecting the required value.

### Criterion Level (CL)

The Criterion Level, displayed as CL by the Reader unit, is used by the doseBadge system for the calculation of the following measurement functions:


- % Noise Dose
- Estimated % Noise Dose

To check the setting for the Criterion Level (CL), press the following buttons. The current setting for the Criterion Level is shown at the bottom of the screen.

The Criterion Level can be selected from the following levels:

- 80dB
- 85dB
- 90dB
- 95dB

If the setting for the Criterion Level is not correct, the value can be selected from the list.

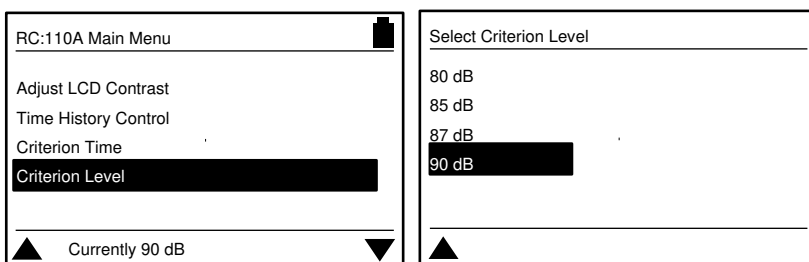

## Threshold Level

The Threshold Level, displayed as TH by the Reader Unit, is used in the calculation of all of the noise parameters. If the Threshold is set, all noise levels below this value are effectively ignored in the measurement data.


To check the setting for the Threshold Level (TH), press the menu button and select the Threshold Level option. The current setting for the Threshold Level is shown at the bottom of the screen.

The Criterion Level can be selected from the following levels:

None  
80dB  
85dB  
90dB



Please note that for many applications, the Threshold Level should be set to None. This applies in the European Union and in many other countries that use the 3dB Exchange Rate.

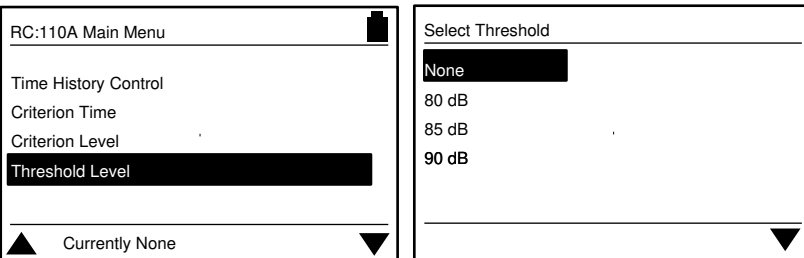

Ensure that this parameter is set to meet the requirements of any regulations that are to be met.

Measurements made with an incorrect Threshold Level **cannot** be recalculated after the measurement has been made.

## Time Weighting

The Time Weighting, displayed as TW by the Reader Unit, is used in the calculation of all of the noise parameters. If the Time Weighting is set, all noise levels are weighted before being used in the calculations.


To check the setting for the Time Weighting (TW), press the menu button and select the Time Weighting option. The current setting for the Time Weighting is shown at the bottom of the screen.

The Time Weighting can be selected from the following levels:

None  
Slow



Please note that for many applications, the Time Weighting should be set to None. This applies in the European Union and in many other countries that use the 3dB Exchange Rate.

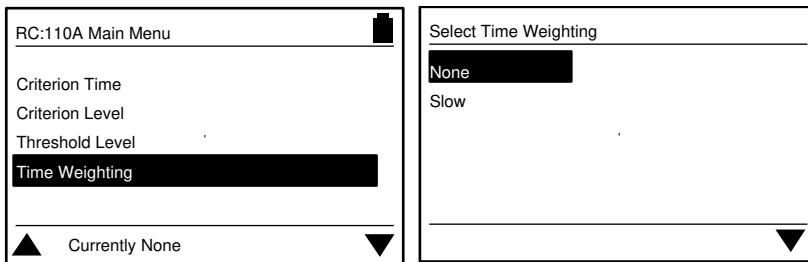

Ensure that this parameter is set to meet the requirements of any regulations that are to be met.

Measurements made with an incorrect Time Weighting **cannot** be recalculated after the measurement has been made.


## Exchange Rate

The exchange rate is used in the calculation of all of the noise parameters.

To check the setting for the Exchange Rate (Q), press the menu button and select the Exchange Rate option. The current setting for the Exchange Rate (Q) is shown at the bottom of the screen.




Ensure that this parameter is set to meet the requirements of any regulations that are to be met. Measurements made with an incorrect Exchange Rate **cannot** be recalculated after the measurement has been made.

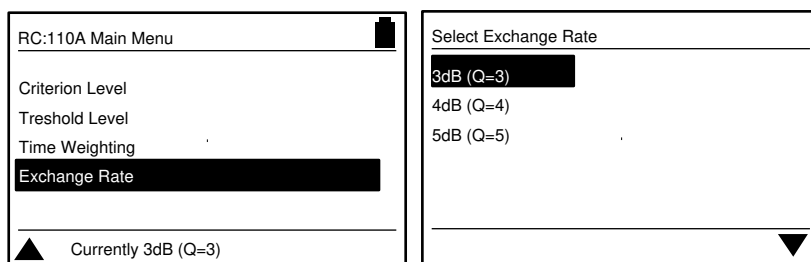

## Dual Channel Measurement

The CR:110A doseBadge provides Dual Channel measurements. This can be switched On or Off

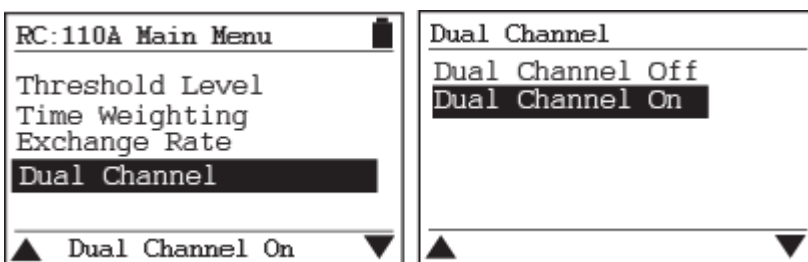


It is recommended that the Dual Channel measurement function is left switched on.


### % Dose Exceedence

The version of the CR:110A doseBadge referred to in this manual provides a visual display of when the accumulated noise has exceeded the % Dose level.

For example, if the Criterion Level is set to 90dB, the 100% Noise Dose is equivalent to a level of 90dB over 8 hours. If this % Dose level is exceeded during the measurement the doseBadge indicator will flash twice per second.

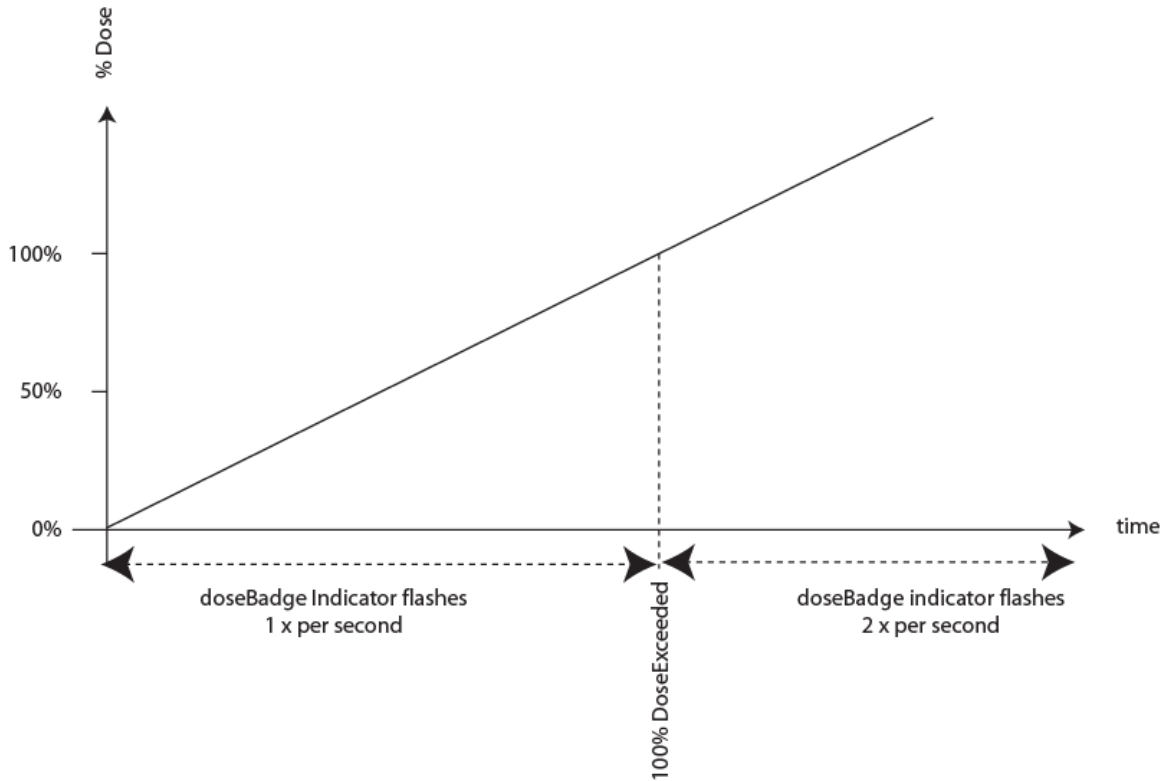


This function can be switched On or Off as required.

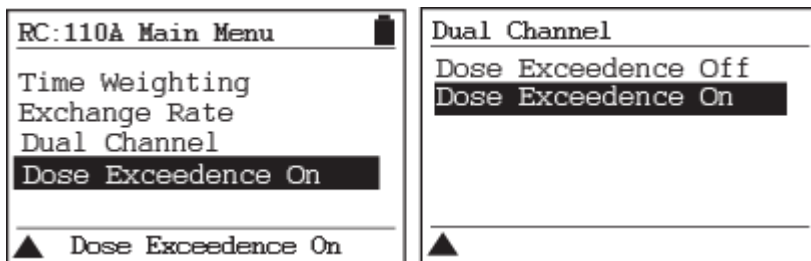

## Section 5 Reviewing & Downloading Measurements


Once measurements have been downloaded from the doseBadge into the Reader unit, they are stored in the memory of the Reader automatically. The measurements can be reviewed on the display of the Reader unit or they can be downloaded from the Reader to the dBLink and the doseBadge Database software.

### Reviewing stored measurements

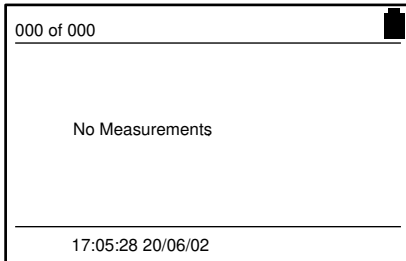

Press the Cancel button to exit any menus and return to the Measurement Display Mode. If there are no measurements stored in the Reader unit, the following information will be displayed:

Where measurements are stored, the Reader will show the last measurement to be downloaded as follows:

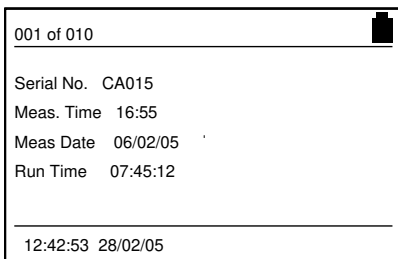

This display shows that there are 10 measurements stored in the memory of the Reader and that the measurement shown is number 1 of 10.

The arrow keys allow the measurement information to be viewed and the different measurements to be accessed as follows:

The information stored for each measurement will be determined by the configuration of the doseBadge.



Please note that the information provided by the 3dB configuration will include  $L_{Aeq}$  and  $L_{EX,8}$  data only if the Threshold Level is None **and** if the Time Weighting is None. If either of these parameters are set to other values, the measurement data will be displayed as  $L_{AVG}$  and TWA.

$L_{Aeq}$  and  $L_{EX,8}$  data cannot be calculated where a Threshold or a Time Weighting are used. Ensure that the doseBadge is correctly configured before making measurements. Measurement data cannot be recalculated after the measurement has been made.

An example of the measurement data parameters provided are shown on the next page.

Please note that the dBLink3 software allows the user to select which additional measurement functions are displayed on the Reader display. When these additional parameters are downloaded, they are automatically stored in the Reader unit but are not displayed on the screen.

L<sub>Aeq</sub> & L<sub>EX,8</sub> Measurement Data

L<sub>avg</sub> & TWA Measurement Data

001 of 010  
 Serial No. CA015  
 Meas. Time 16:55  
 Meas Date 06/02/05  
 Run Time 07:45:12  
 12:42:53 28/02/05

001 of 010  
 Serial No. CA015  
 Meas. Time 16:55  
 Meas Date 06/02/05  
 Run Time 07:45:12  
 12:42:53 28/02/05

001 of 010  
 97.0 Leq  
 dB (A)  
 Run Time 07:45:12


001 of 010  
 97.0 L<sub>avg</sub>  
 dB (A)  
 Run Time 07:45:12

001 of 010  
 95.3 Lex  
 8 hr  
 dB (A)  
 115dBA = Yes

001 of 010  
 95.3 TWA  
 dB (A)  
 115dBA = Yes

001 of 010  
 141.6 Peak  
 dB (C)  
 Battery OK

001 of 010  
 141.6 Peak  
 dB (C)  
 Battery OK

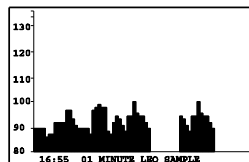

001 of 010  
 78 Dose %  
 Q=5 CT=08 CL=90 TH=80

\*

001 of 010  
 Time: 11:01 06/02/05  
 Cal to 114 dB  
 Offset +0.0 dB  
 Drift +0.0 dB  
 Recal due: 10/01/05

001 of 010  
 263 Est  
 Dose %  
 Q=5 CT=08 CL=90 TH=80

\*


\*

001 of 010  
 11 Dose %  
 Q=3 CT=08 CL=85 TH=No

001 of 010  
 Time: 11:01 06/02/02  
 Cal to 114 dB  
 Offset +0.0 dB  
 Drift +0.0 dB  
 Recal due: 10/01/03

\*

001 of 010  
 1585 Est  
 Dose %  
 Q=3 CT=08 CL=85 TH=No

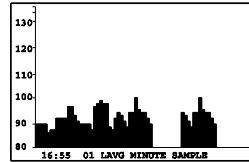

\*

001 of 010  
 10.8 Exp  
 Pa2hr  
 Run Time 07:45:12

\*

001 of 010  
 16.0 Est  
 Exp  
 Pa2hr  
 Run Time 07:45:12

\*

001 of 010  
 139.9 L<sub>AE</sub>  
 dB (A)  
 Run Time 07:45:12

\* These options can be turned off using dBLink3 software

## Time History Display

The measured Time History Data is displayed on the Reader display.


The Time History graph is drawn with a fixed range of 80dB to 130dB in 10dB steps with a marker at 133dB (for overload).

If the measurement was paused, the display will show a solid bar over the full height of the display.

The stored time history data is compressed into a sample size so that the entire time history will be displayed on a single graph. For example, a 3 hour 50 minute measurement will be displayed as 2 minute Leqs to allow all of the measurement information to be shown on the display.


The graph also display the start time of the Time History and the sample size.

The figure below shows an example of a Time History measurement. The Time History display is either Leq for 3dB Exchange Rate, No Time Weighting and no Threshold, or  $L_{AVG}$  for any other configuration.

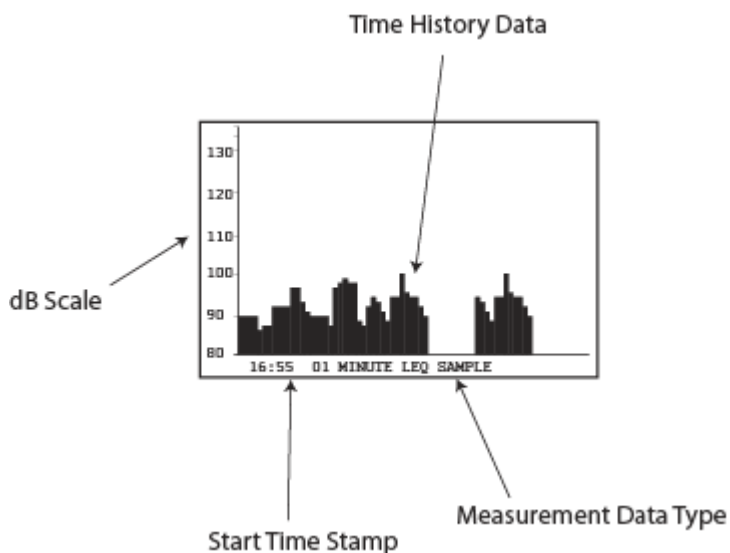


## Other Information

Other information may be displayed by the Reader unit during the measurement review. These are covered below.

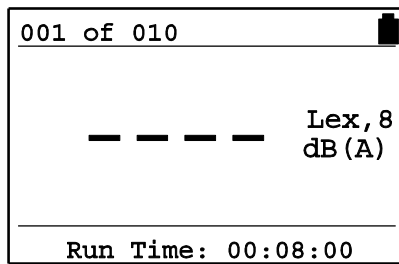


Shown when:

The Run Time and Leq are too low for the Reader unit to accurately calculate an  $L_{EX,8}$  value.

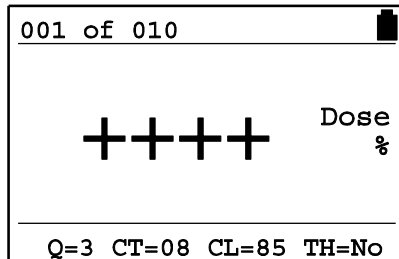


Shown when:

The value for the % Noise Dose is too large to be calculated.

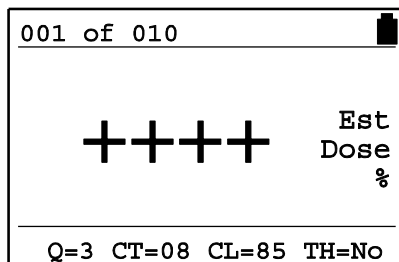

Shown when:

The value for the Estimated % Noise Dose is too large to be calculated.

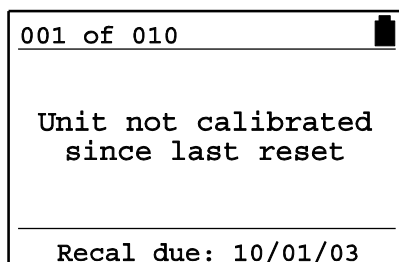

Shown when:

The doseBadge was not calibrated before the measurement was started.

## Downloading measurements to a PC

Measurements that have been stored in the Reader unit can be downloaded to a PC using the NoiseTools software. The NoiseTools software automatically recognises an RC:110A Reader unit and allows measurements to be downloaded, analysed and measurement reports created.



NoiseTools is supplied on a CD-ROM require a PC running Microsoft Windows XP SP3 or later. A USB communications port is required for connection to the RC:110A Reader unit via the supplied USB Cable.

To install the software:

1. Insert the Disc in the CD-ROM drive
2. Follow the instructions on the screen

If the installation program does not automatically start, run d:\setup.exe program from the Start, Run option in the task bar where d is the letter of the CD-ROM drive.



Please note that if you are running on a network, you may need to contact your network administrator to ensure that you have sufficient access rights to install this software. This software should be installed with full administration rights to ensure that the configuration of the software can be completed.

Cirrus Research plc accepts no responsibility for the installation of this software on systems where full access rights are not available.

## Connecting the Reader to a PC

The Reader unit must be connected to a PC to allow measurements to be downloaded to the software. The Reader unit is supplied with a USB Cable which must be used to download the information.



The USB Cable can only be inserted into the Communications socket in one orientation. If the connector will not fit into the socket do not force it. Ensure that the orientation of the connector is correct and that the arrow on the cable is pointing downwards.

When the cable has been connected to the Reader and the PC, ensure that the Reader is switched on. If the NoiseTools software program is running, it will automatically detect the Reader unit and allow the measurements to be downloaded.

Once the connection is made, the measurements can be downloaded. For more information, please refer to the NoiseTools software for more information.

## Section 6 Maintenance & Care

### Annual Verification & Servicing



**WARNING:** There are no user serviceable parts inside the CR:110AIS doseBadge. Service and Calibration must only be carried out by an approved Service Centre. Please contact Cirrus Research plc for details of approved Service Centres.



It is strongly recommended that all doseBadges and Readers are returned to Cirrus or an authorised service centre at least every 12 months for verification, calibration and servicing.

This should only be carried out by Cirrus Research plc or a service centre authorised specifically by Cirrus Research plc for the service and calibration of the CR:110AIS doseBadge.

The date that the Reader and doseBadges are due for "recalibration" can be seen on the print-out and in data transferred to the computer.

### Cleaning



The doseBadge, Reader and Keyfob should only be cleaned with a damp, lightly soaped cloth. No solvent based cleaners should be used as they may damage the doseBadge window or the case labels.

The doseBadge microphone grill must be protected against soiling as blocked grill holes can deteriorate the performance of the unit. Attempting to remove dirt from these holes with sharp implements can damage the sensitive membrane underneath.

The RC:110A Reader Unit should be cleaned with a damp cloth only. Ensure that the InfraRed port and the Acoustic Calibrator are free from damage and dirt. Do not insert any sharp objects into the Acoustic Calibrator.

### Storing the doseBadge



If the doseBadge is left unused for a period of time longer than a few days, it is recommended that the doseBadge be fully charged. This will avoid any potential damage to the internal batteries through unwanted discharge.

If the doseBadge is not used for 1 hour, it will go into Sleep mode to protect the internal battery and to prolong the operating life. To use the doseBadge, the Shake-to-Wake sensor must be activated. Please refer to page 25 for details.

If the doseBadge is left unused, the internal batteries in the badge must be left charged. When fully charged and not used, the badge battery will remain charged for at least 14 days. If the unit is stored longer than this and the batteries are left to become totally discharged, THEY WILL EVENTUALLY BE DAMAGED.

To ensure optimum operation, doseBadges that have not been used for one month should be recharged.

---

## To prevent damage please ensure that the doseBadges are recharged every 2 weeks (14 days)

### Cycle Charge of the doseBadge Battery


The CU:110A Charger Unit provides a Discharge/Charge cycle that allows the performance of the battery to be kept at an optimum level.

This cycle fully discharges the battery before charging. Please note that this is not the normal operation of the CU:110 Charger Unit.

To carry out this charge cycle, connect the doseBadges to the CU:110A Charger and connect the power supply.

Press the Discharge/Charge cycle button located on the bottom of the charger as shown below.

If you press the button through the hole on the bottom of the charger, it will discharge all badges that are currently connected, then charge them. This can take up to about 6 hours depending on the battery type and initial charge state.

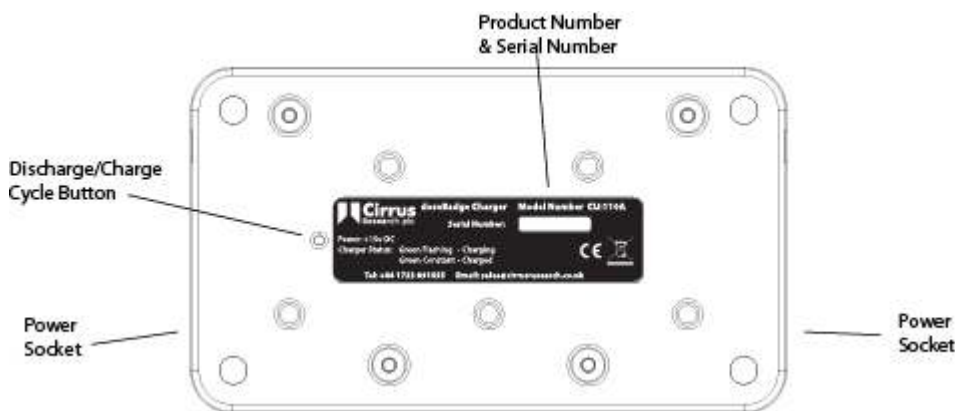

The internal NiMH (Nickel Metal Hydride) battery, like all rechargeable batteries, will self discharge. When arranged into a battery the individual cells within the battery, not being identical, will not all discharge at the same rate.



This means that the first cell to discharge may be forced into a 'reverse current' situation by the other cells and will be damaged. If the batteries are simply left discharged, there is no way of preventing this as the discharge is within the cell.

Even if they are removed from the doseBadge the self-discharge will still occur. To prevent this, it is recommended that the badge be charged monthly when not being used for measurements.

If the doseBadges are left on a charger without power, the doseBadges will discharge. To ensure that the doseBadges do not discharge, remove them from the Charger unit when the Charger is not connected to the power supply.

### Changing the Reader Batteries

The doseBadge Reader unit shows the battery level in the top right hand corner of the display as shown below. The figure on the left below shows a full battery level and the figure on the right shows the battery level at 10% of the full capacity.

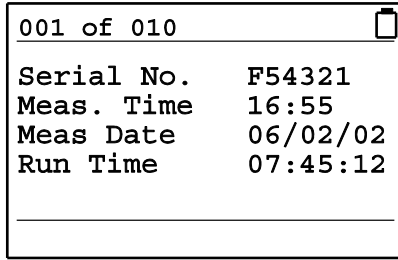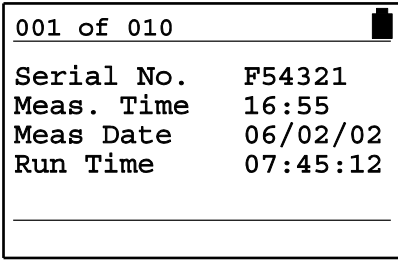

The batteries for the RC:110A Reader unit are located under the black cover on the back of the instrument. Before changing the main batteries, ensure that the Reader is switched off.


The memory of the Reader unit is protected when the batteries are removed. The clock of the Reader will be reset after 15 minutes when the batteries are removed.

Locate the battery compartment cover and remove it from the instrument.

Remove the batteries from the Reader unit and replace with batteries of equivalent type and quality.

The battery should be of alkaline type AA (LR6 / AM3 / MN1500 / Mignon).

Ensure that the polarity of the batteries is correct. Replace the battery cover and switch the Reader unit on.

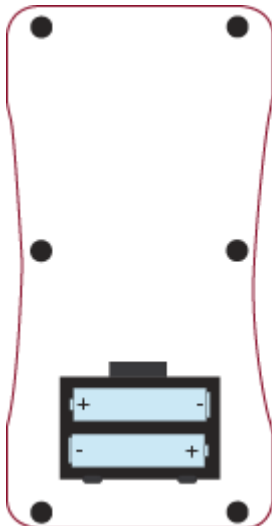

Remove the battery cover and replace the batteries.

Ensure the correct polarity when replacing the batteries

**Changing the RC:101A Keyfob Battery**

When the red indicator of the Keyfob becomes dim, the internal battery requires changing.

Carefully remove the small screws on the back of the Keyfob, and lift off the back. Slide the battery out and replace with a Lithium battery type CR2025. This is not a rechargeable battery.

Ensure that the PCB is located correctly within the case and replace the back cover. Replace the two screws and secure the case.

---

## Section 7 Troubleshooting



The following information is designed to solve common problems found when using the doseBadge system. If you cannot solve the problem, please contact your local representative or Cirrus Research plc directly. There are no user serviceable parts inside the doseBadge, Reader or Chargers.

### The CR:110A doseBadge

Symptom	Possible Cause	Solution
The doseBadge will not Reset	The doseBadge has not been used for more than 1 hour and is in Sleep Mode	Wake the doseBadge by shaking. Refer to page for 25 details.
	The doseBadge battery is flat	Charge the doseBadge
The doseBadge will not Calibrate	The InfraRed window on the doseBadge is not aligned with the InfraRed Port on the Reader	Align the InfraRed window on the doseBadge with the InfraRed Port on the Reader unit
	The doseBadge has not been used for more than 1 hour and is in Sleep Mode	Wake the doseBadge by shaking. Refer to page for 25 details.
	The doseBadge battery is flat	Charge the doseBadge and then reset the doseBadge using the Reader Unit.
The doseBadge will not Start	The doseBadge is not pushed into the Acoustic Calibrator	Insert the doseBadge into the Acoustic Calibrator cavity on the Reader unit
	The InfraRed window on the doseBadge is not aligned with the InfraRed Port on the Reader	Align the InfraRed window on the doseBadge with the InfraRed Port on the Reader unit
	The doseBadge has not been used for more than 1 hour and is in Sleep Mode	Wake the doseBadge by shaking. Refer to page for 25 details.
The indicator does not show when the doseBadge is shaken	The doseBadge battery is flat	Charge the doseBadge and then reset the doseBadge using the Reader Unit.
	The InfraRed window on the doseBadge is not aligned with the InfraRed Port on the Reader	Align the InfraRed window on the doseBadge with the InfraRed Port on the Reader unit
	The Reader is too far away from the doseBadge	Move the Reader closer to the doseBadge and retry
	The communication between the Reader and the doseBadge was not completed	Ensure that the communication between the Reader and doseBadge is completed before moving the Reader unit.
The doseBadge runs for 1 minute and then stops	The doseBadge was not reset before the measurement was started. The low battery flag is still set in the doseBadge.	Ensure that the doseBadge was Reset before Calibration to clear the low battery flag.
There is no Time History data for the measurement	The Time History setting in the Reader is configured to Off.	Turn the Time History download function on

## The RC:110A Reader

Symptom	Possible Cause	Solution
The Reader will not switch on	The Reader Batteries are flat	Replace the batteries in the Reader unit.
The Reader gives an error when Resetting the doseBadge: <b>"No Badge"</b>	The doseBadge battery is flat	Charge the doseBadge
	The InfraRed window on the doseBadge is not aligned with the InfraRed Port on the Reader	Align the InfraRed window on the doseBadge with the InfraRed Port on the Reader unit
	The ambient light is too high and is interfering with the Infra Red Communications.	Avoid using the doseBadge in very bright sunlight. Shield the Infra Red windows from very bright light.
The Reader gives an error when Resetting the doseBadge: <b>"Not Compatible"</b>	The doseBadge is a CR:100A or a CR:100B and the configuration is not supported by these units.	Change the configuration to suit the CR:100A or CR:100B doseBadges or use a CR:110A doseBadge. See @@@ for more details.
The Reader gives an error when calibrating the doseBadge: <b>"No Badge"</b>	The doseBadge battery is flat	Charge the doseBadge
	The InfraRed window on the doseBadge is not aligned with the InfraRed Port on the Reader	Align the InfraRed window on the doseBadge with the InfraRed Port on the Reader unit
	<b>"Too Low"</b> The doseBadge is not pushed into the Acoustic Calibrator	Insert the doseBadge into the Acoustic Calibrator cavity on the Reader unit
	The ambient light is too high and is interfering with the Infra Red Communications.	Avoid using the doseBadge in very bright sunlight. Shield the Infra Red windows from very bright light.
The Reader gives an error when Calibrating the doseBadge: <b>"Not Compatible"</b>	The doseBadge is a CR:100A or a CR:100B and the configuration is not supported by these units.	Change the configuration to suit the CR:100A or CR:100B doseBadges or use a CR:110A doseBadge.
The Reader gives an error when downloading (Reading) the doseBadge: <b>"No Badge"</b>	The doseBadge battery is flat	Charge the doseBadge
	The InfraRed window on the doseBadge is not aligned with the InfraRed Port on the Reader	Align the InfraRed window on the doseBadge with the InfraRed Port on the Reader unit
	The ambient light is too high and is interfering with the Infra Red Communications.	Avoid using the doseBadge in very bright sunlight. Shield the Infra Red windows from very bright light.
The Reader gives an error when Reading the doseBadge: <b>"Not Compatible"</b>	The doseBadge is a CR:100A or a CR:100B and the configuration is not supported by these units.	Change the configuration to suit the CR:100A or CR:100B doseBadges or use a CR:110A doseBadge.
There is no Time History data for the measurement	The Time History setting is configured to Off.	Turn on the Time History download option

	<b>"Trace Error"</b>	There has been an error during the download of the Time History Data.	
The Reader will not download to the software		The connection between the Reader and the PC is not correct	Ensure that the cable is connected between the Reader and the PC
		The Reader is not switched on	Switch on the Reader and try again
		The dBLink software is not running	Run the dBLink software from the Programs, Cirrus, dBLink directory and try again

## The Chargers

Symptom	Possible Cause	Solution
The doseBadge will not charge	The power is not connected to the Charger	Ensure that the CU:195A Power Supply is connected to a supply and to the Charger unit
No lights appear on the charger unit	The power is not connected to the Charger	Ensure that the CU:195A Power Supply is connected to a supply and to the Charger unit
	The mains power supply is damaged	Contact your local representative
The Green charging light does not flash when the doseBadge is connected.	The doseBadge is not properly connected to the charger	Screw the doseBadge fully onto the charger unit
The charger unit is not charging the doseBadges		Perform a Power-on Self Test Database
		Press and hold the Discharge/Charge Cycle button and connect the power. Hold the button for 2 seconds.
		The LED charge indicators will flash in sequence then all of the indicators will show.
		If the LED charge indicators continue to flash, contact Cirrus Research plc or your local representative.

---

## Section 8 Glossary & Terminology

The following section lists the acoustic terminology that is found in this manual and in the CR:110AIS doseBadge Personal Noise Dosemeter and RC:110A Reader Unit. For further information, please contact your local representative or Cirrus Research plc directly.

### Terminology

The doseBadge and Reader can produce the following metrics as defined in the relevant standards. Some of these are available on the Reader display, others require a printer or the computer software supplied.

When the data is downloaded from the RC:110A Reader unit to the doseBadge software, the following parameters are provided:

#### **$L_{Aeq}$**

The level which, if maintained constant for the same period as the measurement, would contain the same amount of energy as the fluctuating noise level. "A" weighted and expressed in decibels (dBA). Doubling the energy results in a 3dB change in the  $L_{eq}$ . This is denoted by  $Q=3$ . The Threshold used in the calculation of  $L_{AVG}$  (see below) is not used for the calculation of  $L_{Aeq}$ .

For example:

If the noise level in a factory was a constant 85dB and the measurement period was 4 hours, the  $L_{Aeq}$  would be 85dB(A).

#### **$L_{AVG}$**

$L_{AVG}$  is the average Sound Level over the measurement period when the exchange rate (Q) is other than 3dB or where there is a Threshold applied or a Time Weighting applied.

$L_{AVG}$  is the equivalent of  $L_{eq}$  for exchange rates other than 3dB, for example  $Q=5$ . The Threshold value is used during the calculation of  $L_{AVG}$  with any levels below the threshold not being included.

For example:

Assume the threshold level is set to 80dB and the exchange rate is 5dB (which are the settings for OSHA's Hearing Conservation Amendment). If a one hour measurement was taken in an environment where the noise levels varied between 50dB and 70dB, the sound level would never exceed the threshold level and the instrument would record no value for the  $L_{AVG}$ . If the sound level exceeded the 80dB threshold for only a few seconds, then only these seconds would contribute to the  $L_{AVG}$  giving a level of around 40dB which is much lower than the actual ambient sound levels in the environment.

#### **$L_{EP,d}$**

The  $L_{EP,d}$  is the average of the measured  $L_{eq}$  over an eight hour period. The  $L_{EP,d}$  will be lower than the  $L_{eq}$  when the measurement duration is less than eight hours, equal to

---

the  $L_{eq}$  for a measurement of eight hours, and higher than the  $L_{eq}$  for measurements over eight hours.

For example:

If a noise measurement was made for 4 hours and the  $L_{Aeq}$  value was 90dB(A), the  $L_{EP,d}$  value would be calculated to be 87dB(A) as the measurement duration is half the Criterion Time of 8 hours and the exchange rate is 3dB.

### **$L_{EX,8h}$**

Under the EU Physical Agents (Noise) Directive which will be introduced in member states of the EU by February 2006, the terminology for the Daily Personal Noise Level or  $L_{EP,d}$  has been changed to be  $L_{EX,8h}$ . The calculation is the same and the data is calculated from the  $L_{Aeq}$  and Measurement Duration in the same way as for  $L_{EP,d}$ .

### **TWA**

The Time Weighted Average is the average of the measured  $L_{AVG}$  over an eight hour period. The TWA will be lower than the  $L_{AVG}$  when the measurement duration is less than eight hours, equal to the  $L_{AVG}$  for a measurement of eight hours, and higher than the  $L_{AVG}$  for measurements over eight hours.

### **% Dose**

A percentage of a fixed dose value based on the criterion level and criterion time. The criterion level and time are set by local standards.

For example, some Regulations may mandate the use of 85dB for 8 hours as the limit for a daily noise exposure. If the noise level was a constant 85dB for 8 hours, this would generate a % Dose of 100%.

### **Estimated Dose**

Estimates the % dose (described above) that would have been received by the wearer if the average level measured had existed for the period defined by the criterion time.

For example, if for a 4 hour measurement the % Dose was 50%, the Estimated Dose would be 100% for the 8 hours of the Criterion Time.

### **Exposure (Pa<sup>5</sup>s, Pa<sup>5</sup>hr)**

The noise exposure expressed in linear terms rather than using the logarithmic dB unit or % dose. Expressed in Pascal squared hours (Pa<sup>5</sup>hr) or Pascal squared seconds (Pa<sup>5</sup>s).

### **Estimated Exposure**

Estimates the exposure (described above) that would have been received by the wearer if the average level measured had existed for the period defined by the criterion time. Expressed in Pascal squared hours (Pa<sup>5</sup>hr).

### **$L_{AE}$ or SEL**

---

The level which, if maintained constant for a period of 1 second would have the same sound energy as that actually received by the doseBadge during the measurement period. For example, if the measurement duration was 8 hours and the  $L_{eq}$  was 85dB(A), the  $L_{AE}$  would represent all of the noise energy over the 8 hour period Asquashed into a duration of 1 second.  $L_{AE}$  is the same as SEL (Sound Exposure Level)

### Threshold

Sound Levels below the threshold are excluded from all averaging.

For example, OSHA measurements use an 80dB threshold and call for a hearing conservation program to be implemented when the eight hour TWA exceeds 85dB (50% dose).

### Criterion Level (CL)

In dB, the normalised eight hour average weighted sound level the corresponds to the maximum permitted daily exposure or 100% noise dose.

### Criterion Time (CT)

The time, in hours, used in the calculation of the % Dose and Estimated % Dose measurement parameters. By default, this is set to 8 hours but can be configured to other durations in the Reader unit.

### Peak

The true peak level of the pressure wave (not the highest sound pressure level which is termed the  $L_{max}$ ). The CR:110AIS doseBadge measures the true Peak level.

### Overload

Indicated when the noise level exceeds the upper design limit of an instrument. In the doseBadge this is set to 130dB(A) Sound Level

### Glossary

A Weighting	A standard weighting of the audible frequencies designed to reflect the response of the human ear to noise.
Acoustic Calibrator	An instrument that provides a reference noise source that is used to calibrate and check the performance of a Sound Level Meter.
ANSI S1.25:1991	The American (US) Standard for Personal Sound Exposure Meters (PSEM)
C Weighting	A standard weighting of the audible frequencies used for the measurement of Peak Sound Pressure level.
CE Marking	A label used to show that the Sound Level Meter conforms to the specification of a European Directive
dB(A)	Decibels A weighted

---

dB(C)	Decibels C Weighted
Decibel (dB)	The units of sound level and noise exposure measurement
Fast Time Weighting	A standard time weighting applied by the Sound Level Meter
IEC 61252:1993	The International Standard for Personal Sound Exposure Meters (PSEM)
Integrating Averaging Sound Level Meter	A Sound Level Meter which accumulates the total sound energy over a measurement period and calculates an average
$L_{AE}$	Sound Exposure Level (SEL) with "A" frequency weighting
$L_{Aeq,t}$	Equivalent continuous sound pressure level. A measure of the average sound pressure level during a period of time, t, in dB with "A" weighting.
$L_{AS}$	Sound level with "A" Frequency weighting and Slow Time weighting
$L_{ASmax}$	The maximum Sound level with "A" Frequency weighting and Slow Time weighting
$L_{Cpeak}$	Peak Sound pressure level with "C" frequency weighting
$L_{EP,d}$	Daily personal noise exposure as defined by ISO 1999. This is the $L_{Aeq,t}$ normalised over an 8 hour reference period. $L_{EP,d}$ assumes that the noise level for the rest of the 8 hour reference period is "quiet".
$L_{eq}$	Equivalent continuous sound pressure level. A measure of the average sound pressure level during a period of time, t, in dB
Overload	The input to the Sound Level Meter is too high for the current measurement range. Change the range
Peak	The maximum value reached by the sound pressure at any instant during a measurement period (in dB usually with C frequency weighting)
Personal Sound Exposure Meter	An instrument for measuring the noise exposure of a person
SEL	Sound Exposure Level, displayed as $L_{AE}$
Slow Time Weighting	A standard time weighting applied by the Noise Measurement Instrument
Sound Level	Sound Pressure Level with a Frequency weighting, such as dB(A)
SPL	Sound Pressure Level, the basic measure of noise loudness, expressed in decibels
Time History	A sample of the noise levels taken every 1 second throughout the measurement period.

---

---

Type 1	Laboratory & Field Grade for Sound Level Meters. Personal Noise Dosemeters to the IEC 61252 Standard do not have a Class or Type.
Type 2	General Field Grade for Sound Level Meters. Personal Noise Dosemeters to the IEC 61252 Standard do not have a Class or Type.
TWA	Time Weighted Average. The daily personal exposure level calculated from the $L_{AVG}$ and the measurement duration. TWA replaces $L_{EP,d}$ in the OSHA Q=5 version of the doseBadge.
$L_{AVG}$	The continuous A weighted sound level measured over the measurement period with an exchange rate of 5dB. $L_{AVG}$ replaced $Leq$ in the OSHA Q=5 version of the doseBadge.
% Dose	The noise level measured expressed as a percentage of a fixed level. For example, the reference 100% level would be a continuous level of 90dB for 8 hours. The Criterion Time (CT) and Criterion Level (CL) are used for the 8 hours and 90dB level.
% Estimated Dose	The % Dose projected forward over an 8 hour duration, assuming that the noise level continued at the same level for the rest of the 8 hour reference period. The Criterion Time (CT) and Criterion Level (CL) are used for the 8 hours and 90dB level.
Exposure in Pa <sup>2</sup> hr	The noise level measured expressed in as a linear term in Pa <sup>2</sup> hr (Pascal Squared Hours). For example, a noise level of 94dB for 4 hours would be 1Pa <sup>2</sup> x 4 hours (94dB = 1Pa) giving an Exposure of 4 Pa <sup>2</sup> hr. The 8 hour period is taken from the Criterion Time (CT).
Estimated Exposure in Pa <sup>2</sup> hr	The Noise Exposure above projected forward over an 8 hour duration, assuming that the noise level continued at the same level for the rest of the 8 hour period. The 8 hour period is taken from the Criterion Time (CT).

---

## Appendix 1 Specifications

The CR:110A doseBadge Personal Noise Dosemeter and the RC:110A Reader Unit have been designed to meet the requirements of IEC 61252:1993 Personal Sound Exposure Meters and the ANSI S1.25:1991 Personal Noise Dosimeters. The CR:110A doseBadge and the RC:110A Reader unit must be used as a combination to ensure compliance with these standards.

### Applicable Standards

#### **CR:110A doseBadge**

IEC 61252:1993 Personal Sound Exposure Meters

ANSI S1.25:1991 Personal Noise Dosimeters Class Designation 2AS-90/80-5

#### **RC:110 Reader Unit**

Internal Acoustic Calibrator to IEC 60942:2003 Class 2

### Measurement Range (Typical)

70dB(A) to 130dB(A) RMS

120dB(C) to 140dB(C) Peak

### Measurement Functions:

The CR:110A doseBadge and RC:110A Reader Unit support Dual Channel measurements. The measurement data is divided into three sections. In all situations the Overall Measurement Data is stored.

If the doseBadge is configured with Channel 1 and Channel 2 having identical parameters, the dBLink3 software will only display Channel 1.

### Overall Measurement Data

doseBadge Configuration

Calibration Record

Measurement Duration

Highest Peak(C) Sound Level

Overload Exceedence

115dB(A) Maximum Sound Level Exceedence

Battery Status

### Channel 1 Measurement Data

#### **For 3dB Exchange Rate:**

$L_{Aeq}$ ,  $L_{EX,8h}$ ,  $L_{AE}$ , % Dose, Exposure ( $Pa^2h$ )

Estimated % Dose, Estimated Exposure ( $Pa^2h$ )

#### **For 4dB & 5dB Exchange Rates (and configurations with Time Weighting or Threshold):**

$L_{AVG}$ , TWA, % Dose, Estimated % Dose

1 Minute Time History of:

$L_{Aeq}$  (3dB) or  $L_{AVG}$  (4dB or 5dB)

Peak(C) Level

---

---

## Battery Level

### Channel 2 Measurement Data

$L_{Aeq}$ ,  $L_{EX,8h}$ ,  $L_{AE}$ , % Dose, Exposure ( $Pa^2h$ )  
Estimated % Dose, Estimated Exposure ( $Pa^2h$ )

### doseBadge Configuration

#### Channel 1: Independent User Configuration of:

Exchange Rate  
3dB, 4dB or 5dB  
Criterion Level  
80dB, 85dB, 90dB  
Criterion Time  
8hrs, 12hrs, 16hrs, 18hrs  
Threshold  
None, 80dB, 90dB  
Time Weighting  
None, 'S' (Slow)

#### Channel 2: Preset to

Exchange Rate  
3dB  
Criterion Level  
85dB  
Criterion Time  
8hrs  
Threshold  
None  
Time Weighting  
None

### Power

CR:110AIS doseBadge  
Internal NiMH Battery with intelligent charging system

RC:110A Reader  
2 x AA/LR6

CU Series Chargers  
CU:195A Mains Power Supply

Memory Backup                      The memory of the RC:110A Reader is protected when the main batteries are removed.

### Calibration

Internal Acoustic Calibrator to IEC 60942:2001 Class 2  
Calibration Level                      114dB  
Calibration Frequency                1kHz

---



---

## Appendix 2 Ordering Information

The doseBadge measurement kits can be ordered with standard numbers of doseBadges.

Number of doseBadges	Standard Measurement Kit
1	CK:110AIS/1
2	CK:110AIS/2
5	CK:110AIS/5
10	CK:110AIS/10

Additional or spare components can be added to a system. The following components are available:

CR:110AIS	doseBadge	
RC:110A	Reader Unit	
CU:195A	Mains Power Supply.	Specify UK, EU or USA Standard Plug
UA:110	doseBadge Windshield	
SP:131	Mounting Kit for CR:110AIS doseBadge	
SW:NT	NoiseTools Software	
RC:101A	Keyfob Remote Control	
CK:100	Carrying Case for doseBadge System	
CU:110A	Charger Unit	
ZL:102	USB Download Cable	

---

## Appendix 3 EU Declaration of Conformity



Manufacturer's name: Cirrus Research plc  
Manufacturer's address: Bridlington Road, Hunmanby, YO14 0PH, North Yorkshire, UK.  
Product description: Personal Sound Exposure Meter  
Product name: Noise DoseBadge  
Product Number: CR:110AIS

The object of the declaration described above is in conformity with the relevant Union harmonisation legislation: Directive 94/9/EC (until April 19th, 2016) and Directive 2014/34/EU (from April 20th, 2016).

Provisions of the Directive fulfilled by the Equipment:

Group I Category 1M	Ex ia I
Group II Category 1G	Ex ia IIC T4

Notified Body for EC-type Examination:  
Baseefa 1180 Buxton UK

EC-Type examination certificates:

Baseefa04ATEX0330 - latest supplement Baseefa04ATEX0330/3 issued 08 June 2007  
Baseefa04ATEX0331X - latest supplement Baseefa04ATEX0331X/3 issued 08 June 2007

Notified Body for production:  
Baseefa 1180 Buxton UK

Harmonised Standards used:  
EN 50303: 2000

EN 60079-0:2012+A11:2013

EN 60079-11:2012

Other Standards and Specifications used:  
EN 60079-26:2015

### Directive 2014/30/EU

Harmonised standards used:

EN 61000-6-3: 2007+A1:2011  
EN 61000-6-1 :2007 with minor amendments as specified in following standard  
EN 61252:1997/A1:2001 (Electroacoustics. Specifications for personal sound exposure meters)

The user manual also contains details of IECEx and other non-EU specific approvals held.

On behalf of the above named company, I declare that, on the date the equipment accompanied by this declaration is placed on the market, the equipment conforms with all technical and regulatory requirements of the above listed directives.

This declaration of conformity is issued under the sole responsibility of the manufacturer.

A handwritten signature in black ink, appearing to read 'M Williams'.

Martin Williams  
Director  
9<sup>th</sup> May 2016

## Appendix 4 Intrinsic Safety Certification

CR:110AIS doseBadge Personal Noise Dosemeter  
 Manufactured by Cirrus Research plc  
 Acoustic House, Bridlington Road, Hunmanby, North Yorkshire YO14 0PH

### Group I Mining Applications

#### ATEX

CR:110AIS Personal Noise Dosemeter  
 Certificate Number: Baseefa04ATEX0331X  
 Supplementary Certificate: Baseefa04ATEX0331X/1  
 Supplementary Certificate: Baseefa04ATEX0331X/2  
 Supplementary Certificate: Baseefa04ATEX0331X/3

CE  I M1 G

Input Parameters	Ui=10v, Ii=30mA
Output Parameters	Uo=6.4v, Io=31mA, Ci=0, Li=0

#### EEx

EEx ia I (-20°C ≤ Ta ≤ +60°C)

#### IECEX Certificate of Conformity

Certificate Number: IECEX BAS 06.0083X  
 Certificate Number: IECEX BAS 06.0083X Issue 1  
 Ex ia I (-20°C ≤ Ta ≤ +60°C)

#### SIMTARS

IEC Ex SIM 07.004X  
 Ex ia I (-20°C ≤ Ta ≤ +60°C)

Input Parameters	Ui=10v, Ii=30mA
Output Parameters	Uo=6.4v, Io=31mA, Ci=0, Li=0

### Group II Non-Mining Applications

#### ATEX

Certificate No. Baseefa04ATEX0330  
 Supplementary Certificate: Baseefa04ATEX0330/1  
 Supplementary Certificate: Baseefa04ATEX0330/2  
 Supplementary Certificate: Baseefa04ATEX0330/3

CE  II 1 G

Input Parameters	Ui=10v, Ii=30mA
Output Parameters	Uo=6.4v, Io=31mA, Ci=0, Li=0

#### EEx

EEx ia IIC T4 (-20°C ≤ Ta ≤ +60°C)

**IECEX**

IEC Ex BAS 06.0084

IEC Ex BAS 06.0084 Issue 1

Ex ia IIC T4 (-20°C ≤ Ta ≤ +60°C)

**FM Certificate of Compliance**

CR:110AIS Noise Dosemeter

IS / I / 1 / ABCD / T4 Ta = 60°C; IP54

I / 0 / AEx ia IIC / T4 Ta = 60°C; IP54

Special Conditions of Use:

1. The Sealing Base Plate must be fitted to the charging socket in service, to ensure that a degree of protection against the ingress of dust and moisture of at least IP54 is maintained.

Equipment Ratings:

Intrinsically safe for Class I, Division 1, Groups A, B, C, D and Class I, Zone 0, Group IIC. Temperature Class T4 with a maximum surface ambient temperature of 60°C.  
Ingress protection IP54

**doseBadge Case Specifications**

The doseBadge case is manufactured from the following material:

Silicon Brass* comprising typically	14% Zn 4% Si
Plated with	5μ Electroless Nickel 0.25μ Gold

\*US Equivalent C87500 (ASTM B198 Alloy 13B)

## Appendix 5 Intrinsic Safety Markings

### ATEX Directive Certification Description


The ATEX Directive became a mandatory requirement for all hazardous area equipment sold in the European Union from 2003. In addition to the technical requirements demanded by the appropriate standard for each type of product, the ATEX Directive imposes additional requirements on the certificate holder in terms of quality systems and product documentation.

The technical details of gas groupings and temperature classifications are unchanged, but zoning references are amended and gas, vapour and dust categories are combined into a single classification as shown below.


	Pre ATEX	ATEX
Zone 2	Gas, Vapours & mists	Category 3 Gases, vapours, mists & dusts
Zone 1	Gas, Vapours & mists	Category 2 Gases, vapours, mists & dusts
Zone 0	Gas, Vapours & mists	Category 1 Gases, vapours, mists & dusts
Zone 22	Dusts	
Zone 21	Dusts	
Zone 21	Dusts	

Because the ATEX Directive is different to the IEC/CENELEC Certification, different numbers are used for the Intrinsic Safety Approval. These are described below.

#### Group II Non-Mining Applications

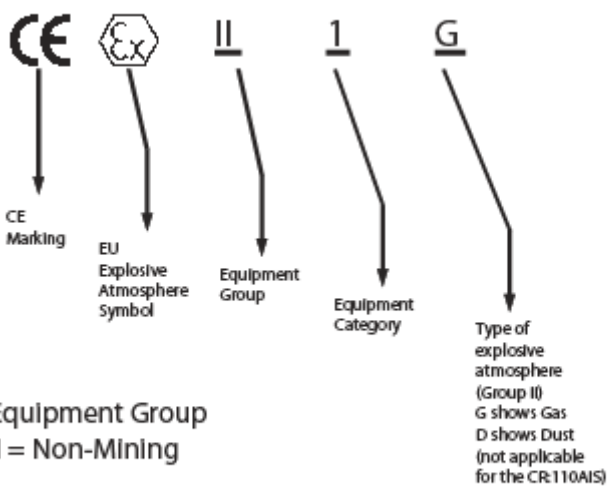

#### Group I Mining Applications

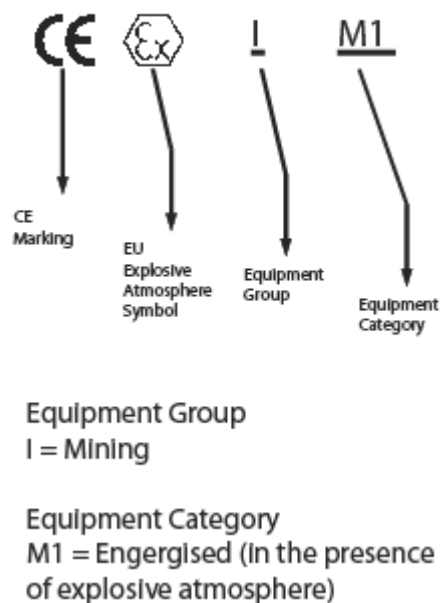

**CENELEC/IEC Certification Description**


The certification for the CR:110AIS doseBadge is as follows:

EEx ia IIC T4 Group 2 for Non-Mining Applications

EEx ia I Group 1 for Mining Applications

The classifications are described below:

**Group II Non-Mining Applications**

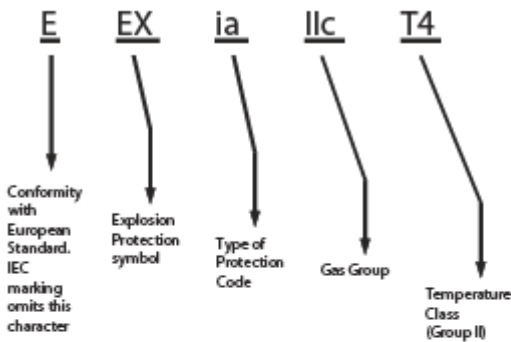

**Type of Protection**

ia = Intrinsic Safety to CENELEC EN 50020 (IEC 79-11) for Group II (Non-Mining)


**Gas Group**

IIC = Hydrogen (Surface - Above Ground)

**Temperature Class (Group II)**

T4 = Maximum surface temperature of equipment = 135°C  
 Ignition temperature or vapour > 135°C

**Group I Mining Applications**

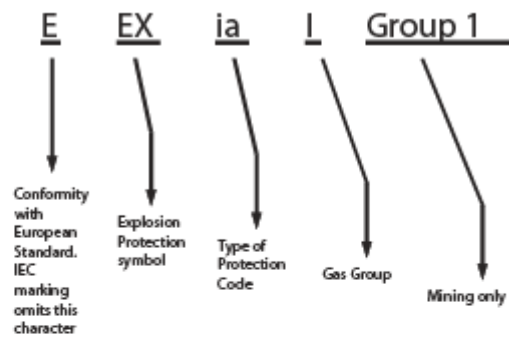

**Type of Protection**

ia = Intrinsic Safety to CENELEC EN 50020 (IEC 79-11) for Category M1 (Mining)

**Gas Group**

I = Methane (Mining)

## **Appendix 6 Intrinsic Safety Certificates**

The certificates relating to the Intrinsic Safety Certification of the CR:110AIS doseBadge are available from the Cirrus Research plc website at <http://www.cirrusresearch.co.uk/library/intrinsically-safe-certificates/>

These are uncontrolled copies of the certificates and should not be reproduced without the permission of Cirrus Research plc.

---

## **Appendix 7 doseBadge Calibration**

As with all noise instruments, calibration is an essential part of the process of making a measurement and helps to ensure that your measurements are accurate and valid. It also helps to ensure that your equipment is operating correctly.

When calibrating your noise measurement instruments, you should always follow the instructions and information provided by the manufacturer.

This section provides detailed information regarding the calibration of the doseBadge system.

### **First Calibration**

The initial calibration of the doseBadge, after the unit has been reset by the RC:110A Reader, is the only one that affects the measurement data.

The second calibration, which is made after the measurement had been completed, is a check that the calibration level is within acceptable tolerances.

Resetting the doseBadge prepares it for a new measurement by clearing all previous data, ensuring the time and date are correct, setting the required measurement parameters and clearing any previous calibration offsets or corrections.

The first calibration is conducted by applying a fixed sound pressure level of 114dB to the doseBadge from the RC:110A Reader, internally reading the levels reported by the doseBadge and then storing a calibration offset within the doseBadge.

This calibration offset is subsequently used by the Reader to correct the data measured. There is no user requirement to apply this offset as it is applied automatically by the doseBadge.

All the data reported by the Reader and the NoiseTools software is already corrected and no further corrections or adjustments are needed.

Calibration offsets between +/-3.0dB are accepted within the doseBadge.

### **Second Calibration**

Once the first calibration has been carried out, any subsequent calibration will follow the same process except that a new calibration offset is not stored nor applied.

Subsequent calibrations are checks only and do not affect the measurement data (only the calibration offset from the first calibration is applied).

The Reader device reports subsequent calibrations as a 'drift'.

The drift is considered to be the difference between the actual calibration offset (from the first calibration) and the notional offset from subsequent calibration checks.

There is no limit to the amount of drift reported by the second calibration.

For example:

---

## First Calibration

Level of Reader calibrator = 114,0dB

1st calibration level reported to Reader by doseBadge = 114,1dB.

Calibration Offset = -0,1dB. (114,0 – 114,1)

The Reader will correct all data from this doseBadge by -0,1dB until the next time that the doseBadge is reset and recalibrated.

## Second Calibration

Level of Reader calibrator = 114,0dB

2nd calibration level reported to Reader by doseBadge = 113,9dB.

Drift = 0,2dB. (114,1dB – 113,0dB)

The Reader will correct all data from this doseBadge by -0,1dB until the doseBadge is reset.

## Second Calibration and Drift

In most applications, drifts of between +/-0,5dB are acceptable; that is that the second calibration check differs from the first calibration results by up to +/-0,5dB.

Drift can occur for a number of reasons, some of which are:

1. A temperature change between the 1st and 2nd calibration in either the doseBadge or Reader.
2. A barometric pressure change between the 1st and 2nd calibration in either the doseBadge or Reader.
3. A relative humidity change between the 1st and 2nd calibration in either the doseBadge or Reader.
4. Battery level in the doseBadge.

The doseBadge Reader contains an acoustic calibrator and sensors which compensate for temperature, pressure and humidity. This ensures that the calibration level provided by the Reader unit is consistent.

However the doseBadge may not be at the same temperature, pressure or humidity as the Reader at the point of calibration.

It is important that both the doseBadge and Reader are left together, in the same environment, for a period of at least 30 minutes prior to calibration.

This allows the temperature of both the Reader and the doseBadge to stabilise.

## Recommended calibration procedure

The recommended process for both first and second calibrations is as follows:

---

1. Charge the doseBadge battery using the CU:110A charger in the same vicinity as the RC:110A Reader.
2. Once fully charged, remove the doseBadge from the CU:110A charger for a period of roughly 5 to 10 minutes.
3. Calibrate the doseBadge using the RC:110A Reader.
4. Carry out the measurement
5. Stop the doseBadge.
6. Charge the doseBadge before carrying out the second calibration and downloading the measurement data.

If the recommended battery recharge cannot be conducted after a long measurement then leave the doseBadge in the same environment as the Reader for at least 30 minutes so that both units are stable and matched for environmental conditions.

---

## **Warranty Information.**

1. Every new product is provided with a 12-month no-quibble warranty. This covers everything we provide against failure, poor workmanship and accidental damage.  
*NB - European Union law states a product has to be fit for purpose for 24 months after purchase. This two-year period covers failure and poor workmanship only.*
2. If the product is calibrated by Cirrus Research or an authorised calibration and service centre, then the initial 12-month warranty is extended by a further 12 months, with the same conditions, for up to 15 years in total.
3. If a product has not been calibrated annually by Cirrus Research or an authorised calibration and service centre, then you may buy back into the warranty scheme for a small fee, plus the cost of calibration. This can only be done once during the life of the product.
4. If a microphone capsule fails under warranty and is physically damaged, we will replace it with a refurbished capsule.
5. If you don't wish to have a refurbished capsule, then you can trade in your damaged capsule for a new one, which will incur a fee.

## Cirrus Research Offices

The addresses given below are the Cirrus Research plc offices. Cirrus Research plc also have approved distributors and agents in many countries worldwide. For details of your local representative, please contact Cirrus Research plc at the address below. Contact details for Cirrus Research authorised distributors and agents are also available from the Internet Web site at the address shown below.

### Main Office

Cirrus Research plc  
Acoustic House  
Bridlington Road  
Hunmanby  
North Yorkshire  
United Kingdom  
YO14 0PH

Telephone: +44 (0)1723 891655  
E-mail: [sales@cirrusresearch.co.uk](mailto:sales@cirrusresearch.co.uk)  
Website: [www.cirrusresearch.co.uk](http://www.cirrusresearch.co.uk)

### France

Cirrus Research France S.A.S.  
679 avenue de la République  
59800 Lille  
France

Tel: +33 633 976 626  
Email: [infos@cirrusresearch.fr](mailto:infos@cirrusresearch.fr)  
Web: [www.cirrusresearch.fr](http://www.cirrusresearch.fr)

### Germany

Cirrus Research GmbH  
Arabella Center  
Lyoner Strasse 44 – 48  
D-60528 Frankfurt  
Germany

Tel: +49 (0)69 95932047  
Email: [vertrieb@cirrusresearch.com](mailto:vertrieb@cirrusresearch.com)  
Web: [www.cirrusresearch.de](http://www.cirrusresearch.de)

---