

Trojan²

Noise Nuisance Recorder

Instrument Handbook

Trojan²
Noise Nuisance
Recorder



Copyright

Copyright © Cirrus Research plc 2010-2022 All rights reserved.

You may re-use this document/publication (not including the Cirrus Research plc logo and other product logos) free of charge in any format for research, private study or internal circulation within an organisation. You must re-use it accurately and not use it in a misleading context. You must not modify text, images or illustrations in any way.

The material must be acknowledged as Cirrus Research plc copyright and you must give the title of the source document/publication.

Where any third party copyright material is identified you will need to obtain permission from the copyright holders concerned.

Trademarks

Cirrus Research plc, the Cirrus Research plc Logo, doseBadge, DOSEBADGE, optimus, Trojan, the Trojan Logo, the NoiseTools Logo and the Noise-Hub Logo are either registered trademarks or trademarks of Cirrus Research plc in the United Kingdom and/or other countries.

Microsoft and Windows are registered trademarks of Microsoft, Inc. All other trademarks acknowledged.

Updates

In the interests of continuous product improvements, Cirrus Research plc reserves the right to make changes to product specifications without notice.

To understand the latest updates that have been implemented into this product and to download the most current version of this user manual, visit our web site at www.cirrusresearch.co.uk

Instrument Serial Number & Information

Please record the serial number and purchase date of your instrument below along with details for any accessories supplied with your optimus sound level meter.

Instrument	Serial Number	Purchase Date
------------	---------------	---------------

_____	_____	_____
_____	_____	_____
_____	_____	_____

Publication History

Issue 2.1	April 2022	Trojan/07/13/2.1EN
-----------	------------	--------------------

About this user manual	4
Introduction	5
Using the sound level meter as a handheld instrument	6
Quick Start Guide	7
Getting started	8
Connecting the cables	8
Connecting the microphone & preamplifier.....	8
Mounting the microphone.....	8
Switching on.....	9
Check the instrument clock.....	9
Memory Size with audio recordings.....	9
Calibrating the instrument	10
Starting a measurement.....	10
Making a recording	10
Starting a recording	10
Stopping a recording	11
Pre-Trigger & Post-Trigger	11
Ending a measurement	11
Packing away the instrument	12
Downloading data to the NoiseTools software.....	13
Connecting to a PC	13
Downloading measurements	13
Selecting measurements	14
Viewing a measurement	15
Selecting an audio recording.....	15
Replaying an audio recording.....	16
Appendix 1 Configuring the sound level meter for noise nuisance measurements	18
Appendix 2 Instrument layout.....	21
RC:199 Remote Control Unit.....	22
Appendix 3 Using a wired remote control.....	22
Appendix 4 Adding a new RC:199 wireless remote control.....	23
Pairing a new RC:199 Remote Control with the Receiver Unit	23
CE Declaration of Conformity	25
Equipment Description	25
Warranty Information.	26
Cirrus Research Offices	27

About this user manual

- The instructions in this user manual refer to the operation of the Cirrus Research plc Trojan² Noise Nuisance Recorder
- The instruments described in this manual are the CK:199A & CK:199B Trojan² Noise Nuisance Recorders
- Some of the functions and features described in this manual may only be available on certain versions of the instrument. Where functions may be optional they will be indicated.
- In this manual, “instrument” is used as a general reference for the sound level meter or Trojan Noise Nuisance Recorder, “remote control” for the RC:199 Remote Control Unit and “calibrator” for an acoustic calibrator.
- This manual describes the recommended method of operation of use for the instrument and any described accessories.
- Throughout this manual, icons and symbols may be used to highlight important information and these sections should be read carefully.

On page 7 is a Quick Start Guide to using the Trojan².

In addition to this guide, we would recommend that you read through the rest of this manual before using the Trojan for the first time to make sure that you are familiar with the functions and features.

Introduction



The Trojan² is an advanced noise nuisance recorder that has been designed to be simple to both setup and operate.

The system features a precision data logging sound level meter which records both the noise levels and audio recordings over long periods of time.

Once the equipment is installed and setup, the user has no control over the operation of the sound level meter which will measure and store noise levels for up to 10 days in a single session.

The only interaction needed by the user is to start and stop the audio recordings using the standard wireless remote control or the optional wired remote control. The user should also ensure that continuous power is provided to the unit.

When the remote control is activated, the instrument will start to record audio and will continue to do so until the stop button is pushed on the remote control.

If the user forgets to press stop, the instrument will end the audio recording after 5 minutes, whilst the measurement of noise levels continues.

The system also features a pre and post trigger system that allows the audio recordings to include 30 seconds of information from before and after the user starts and stops the recording. Note that the instrument must have been measuring for 30 seconds before the full pre-trigger is available.

The amount of time available for the pre and post trigger can be adjusted in the NoiseTools software.

If the external mains power is removed the unit will run on its internal batteries for approximately 8 hours with a new set of batteries.

Changing the batteries is covered in the sound level meter user manual supplied with the Trojan².

If the power is reconnected before this time, the system will simply revert to mains power and continue unaffected.

If the mains power is not reconnected and the internal batteries are run down, the instrument will store the noise data and audio recordings and then shut down safely.

After a shut-down when the mains power is reconnected, the instrument will reboot and after 10 minutes (or when the remote control is pressed or the Start button on the keypad is pressed if this is sooner) restart measuring and storing noise data.

This reduces the risk of data being lost when power is removed from the system.

All of the measurements are stored directly to a high performance memory card which is internal to the system. The measurements are stored continuously which prevents data loss and ensures that the data cannot be tampered with or adjusted before it is downloaded to the reviewing software.

Using the sound level meter as a handheld instrument

The Sound Level Meter can be removed from the case and used as a standalone instrument with the microphone and preamplifier.

Before removing the sound level meter from the case, ensure that it is switched off by holding down the power button and following the on screen instructions.

For details of using the sound level meter as handheld instrument, please refer to the optimus Sound Level Meter user manual supplied with the Trojan² Noise Nuisance Recorder.

Quick Start Guide

- Connect cables
 - Microphone Cable & Power Cable If not already connected
 - Check instrument batteries
 - Replace the instrument batteries if they are not full
 - Connect Microphone & Preamplifier
 - Connect microphone & preamplifier to cable
 - Connect to tripod mount
 - Plug in power supply
 - Switch on power supply
 - Check clock Adjust if needed
 - Calibrate sound level meter
 - Attach acoustic calibrator Switch on calibrator
 - Press Calibrate on sound level meter Wait for calibration cycle
 - Remove acoustic calibrator Take care
 - Attach windshield
 - Start measurement
 - Press start key on sound level meter
 - Starting & Stopping audio recordings
 - Use the remote control to start & stop audio recordings
 - Stop measurement
 - Press the Stop key on the sound level meter
 - Press the Exit button on the sound level meter
 - Switch off
 - Press and hold the power button for 5 seconds. The instrument will show the progress of the switch off process.
 - Disconnect microphone & preamplifier
 - Remove windshield
 - Remove from tripod mount
 - Store in case
 - Download the measurements to the NoiseTools software
-

Getting started

It is recommended that you connect the sound level meter to the NoiseTools software and check that the instrument is configured as required before deployment.

See page 18 for details of the configuration options that are specific to the Trojan² Noise Nuisance Recorder.

Connecting the cables

The Trojan² is shipped with the cables connected so that it can be setup quickly and easily.

The mains power supply and microphone cable can be disconnected from the case. This allows the cables to be replaced if they become damaged.

To remove the cables from the case, gently pull the rubber surround upwards and away from the case. The cable and rubber surround will slide out of the slot. To replace the cable, gently guide the rubber surround and cable back into the slot in the case.

Connecting the microphone & preamplifier

The microphone and preamplifier are stored inside the case next to the sound level meter. Carefully remove the microphone & preamplifier from the case and connect to the microphone extension cable.

Take care when connecting the cable to the preamplifier. The socket and plug will only connect in one orientation and care should be taken to ensure that the plug and socket are correctly aligned.

Gently insert the plug into the socket ensuring that the pins are correctly aligned. Once the plug has been pushed fully into the socket, tighten the locking ring by hand.

Take care not to over tighten the locking ring.

Mounting the microphone

The microphone and preamplifier are mounted onto a tripod which can be positioned away from the main case in the most appropriate location.

To mount the microphone and preamplifier to the tripod, carefully push them through the holes on the tripod mount.

The case has a cut out that allows the preamplifier and the tripod mount to remain coupled when they are not being used.



Switching on


Connect the mains power supply to a socket and switch on the power.

The Green Power Indicator on the Receiver unit will light up and the instrument will start.

When the instrument has booted, the display will switch to showing noise levels.

At the top of the screen the instrument will show **Noise Nuisance View**.

The main display will show the current sound level as a 1 second LAeq value and the graph below shows the noise profile or time history.

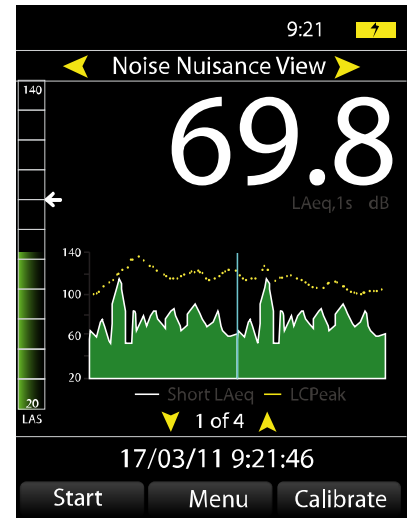

When the instrument is not running or recording, this graph will be displayed in green with yellow markers above showing the peak noise levels.

The instrument is not recording or storing data at this point.

If a measurement is not started within 10 minutes, the instrument will automatically start itself and will begin to record noise levels.

Check the instrument clock

All of the noise measurements and audio recordings made by the Trojan are stamped with the current time and date. It is therefore important that the internal clock in the instrument is set correctly.

At the bottom of the main screen, above the three soft keys, is the current time and date of the instrument. If this is not correct, press the menu key and select Set Clock.

Follow the instructions on screen to set the time and date.

Press **OK** and **Back** to return to the main screen.

Memory Size with audio recordings

Audio recordings take up much more memory than the noise levels measurements and so the Trojan is fitted, as standard, with a 4GB internal memory card.

This allows the instrument to store up to 20 hours of standard quality audio recordings alongside 30 days of noise level measurements with a 1 second time history data rate.


Calibrating the instrument

The instrument should be calibrated before each measurement. To calibrate the instrument, switch on the acoustic calibrator and verify that the green indicator light is showing on the calibrator.

Carefully attach the calibrator to the microphone and press the **Calibrate** key on the sound level meter.

The instrument will perform a calibration. When this is complete and has been successful, the display will show 93.7 and the instrument is ready to be used.

Press **OK** return to the main screen.

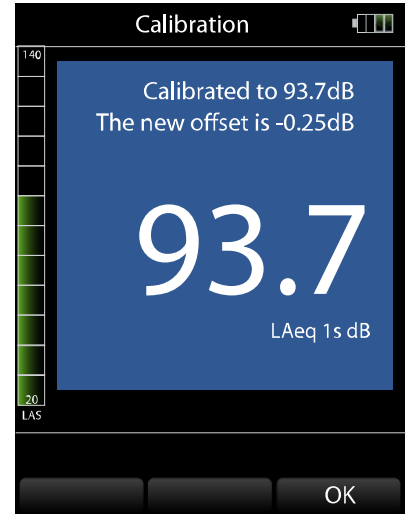

Attach the windshield to the microphone to protect it from damage.

Starting a measurement

To start a new measurement, press the **Start** key on the sound level meter.


The display will change a red spinning indicator will be shown in the top left hand corner. This shows that the instrument is now measuring and storing noise levels.

The main screen will now show the overall LAeq as the large number with the current 1 second LAeq and LAFmax shown below.

The graph will change colour from a dark green to a light green to show that the data is being recorded.

The case can be closed and locked ready for the user to make audio recordings. To lock the case, use either the supplied padlock or one of the blue security tags.

Measurement Running

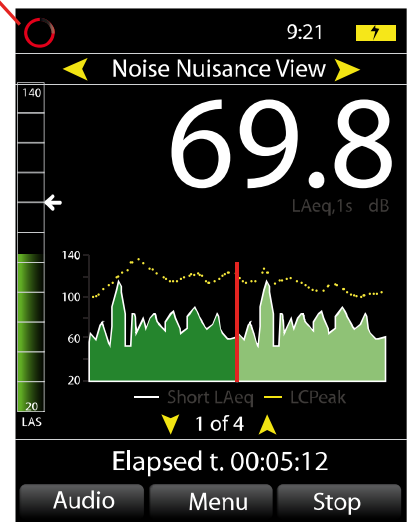


Making a recording

Audio recordings are controlled by the Wireless RC:199 Remote Control or the RC:198B Wired Remote Control (optional).

Starting a recording

To start an audio recording, press the **Record** button on the Remote Control.

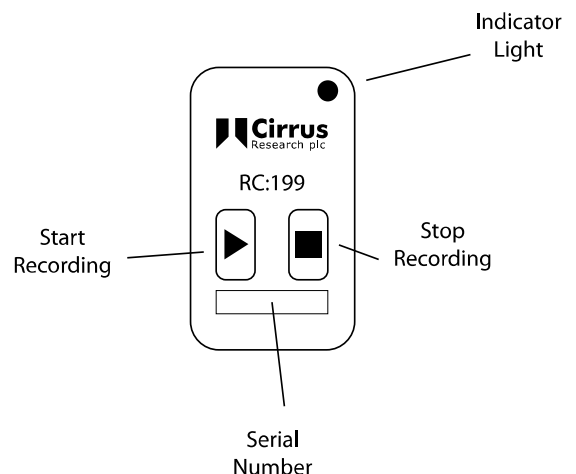

The red **Indicator Light** on the Remote Control will show when the key is pressed.

The Recording LED on the lid of the case will flash blue and then turn red.

This can be seen on the top of the case and is labelled as the Record indicator.

When an audio recording is active, the graph on the instrument display will be coloured blue.

The noise level bar at the left hand side of the display will also be shown in blue and the Audio key will be highlighted.

The maximum length of a single audio recording is 5 minutes (This can be changed in the NoiseTools software).

This ensures that if the user forgets to stop the recording using the remote control, the memory of the instrument is not filled with excessive and possibly unwanted recordings.

If the recording reaches the 5 minute limit, the instrument will automatically stop the audio recording and store the information. The measurement of noise levels will continue as normal.

Stopping a recording

To stop an audio recording, press the **Stop** button on the Remote Control.

The Record indicator will flash blue and then go out. The audio recording has now stopped. The sound level meter will continue to measure and store the noise levels.

Pre-Trigger & Post-Trigger

The Trojan provides a Pre-Trigger and Post-Trigger function for the audio recordings. As standard, these are both set to 30 seconds and they can be changed in the NoiseTools software.


When a recording is activated, the instrument will store the previous 30 seconds of audio from before the button was pressed and when a recording is stopped, the instrument will continue to store audio for a further 30 seconds.

Note that the pre-trigger is only available once the instrument has been measuring for at least 30 seconds.

When the Post-trigger is active, the Record indicator will not be lit but the audio will still be recorded.

Ending a measurement

To end a measurement, open the case and press the **Stop** button on the instrument. The measurement will be stopped and the data stored into memory.

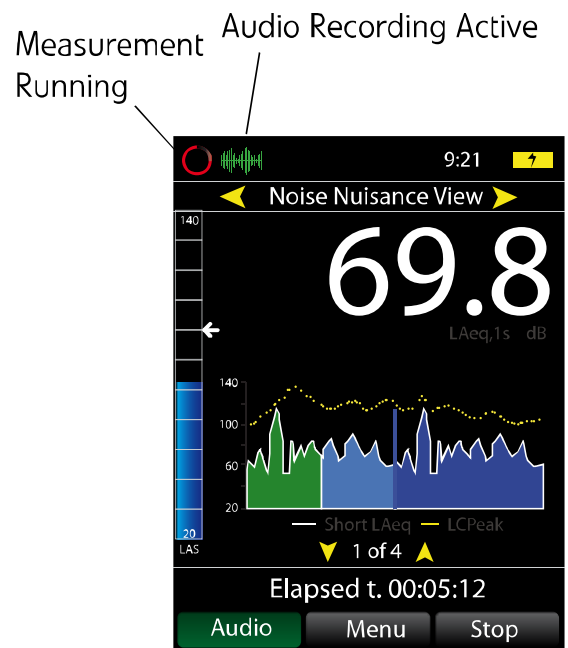

If the instrument has been left unattended for more than 15 minutes with the case closed, the display will be switched off to reduce power consumption. This can be changed in the NoiseTools software.

Press any key on the instrument to activate the display and then press the Stop button.

The instrument will show the overall $LA_{EQ,t}$ and L_{AFmax} values for the measurement.

Press the **Exit** key to return to the main screen.

Packing away the instrument

Before packing the instrument away, switch off the instrument. Press and hold the power button on the side of the sound level meter until the instrument has switched off.

Disconnect the mains power supply from the socket.

The microphone and preamplifier can be stored in the case along with the wireless remote control units. This will protect the microphone from damage during transit and storage.

To remove the preamplifier from the cable, carefully loosen the larger locking ring until the cable can be removed.

Do not attempt to twist or turn the cable whilst it is connected to the preamplifier. This may damage the cable and prevent the instrument from working correctly.

Do not remove the microphone capsule from the preamplifier.

The microphone cable and mains power supply can be disconnected from the case if required. This is not essential and the cables can be stored in the backpack when connected to the main case.

Store the accessories such as the tripod in the backpack.

Downloading data to the NoiseTools software

The noise measurements and audio recordings are downloaded directly from the instrument into the NoiseTools software. This program allows measurements to be viewed and audio recordings replayed as well as reports created and analysis of the information to be made.

This section gives a brief overview of the software and the process to download, display and view measurements, as well as how to listen to an audio recording.

Connecting to a PC


Data is downloaded from the sound level meter via a USB cable which is fitted to the unit. A USB cable is fitted to the Trojan to allow data to be downloaded without removing the instrument from the case.

The NoiseTools software should be installed and running before connecting the Trojan² to the PC.

Connect the free end of the USB cable to a USB socket on the PC. The instrument will switch on and the NoiseTools software will detect the instrument ready for download.


Downloading measurements

To start the download process, click the download button as shown below.

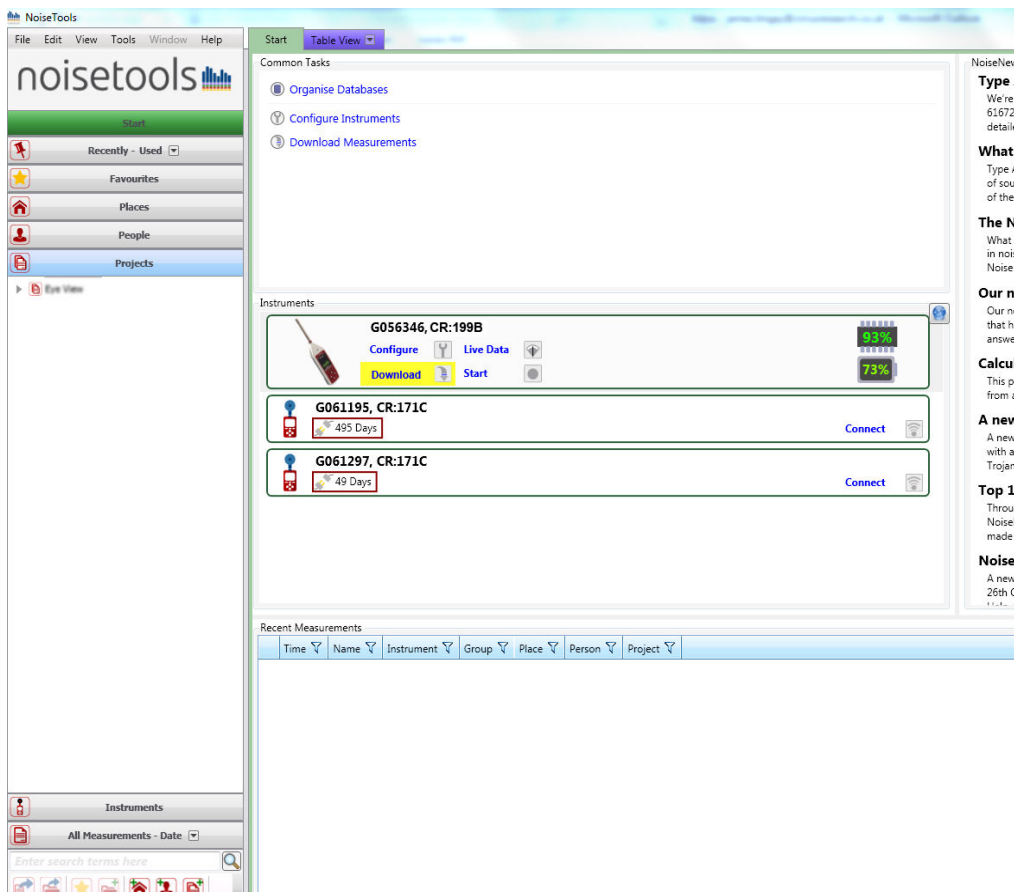

Selecting measurements

The download window will open and the list of measurements currently stored in the instrument will be shown as below.

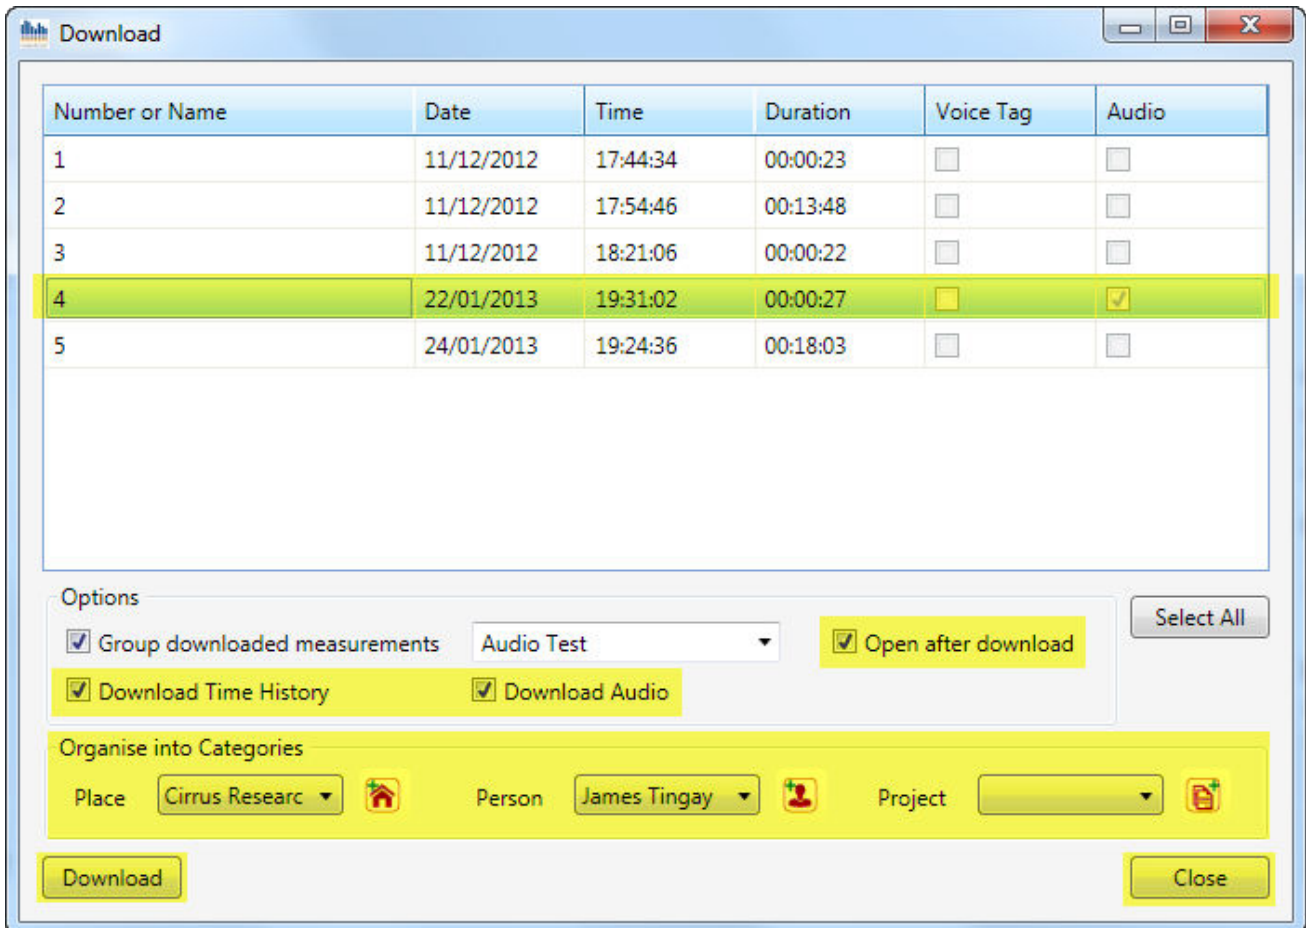

Select the measurement or measurements to be downloaded by clicking on them. Multiple measurements can be selected by using the Control (CTRL) key with the mouse. To select all of the available measurements, click the Select All button.

Click the **Open After Download** box. This will automatically open the measurement after it has been downloaded.

Select the **Download Time History** and **Download Audio** boxes.

Measurements can be tagged with a **Place**, **Person** or **Project**. This can be used, for example, to store a set of different measurements from the same property or location for easy reference.

To allocate one of these tags click the box and any that have been previously used will be shown. Use the **Add** box next to the pull down to enter a new option.


When all of the options have been selected, press the **Download** button and the software will download the information and store it into the NoiseTools database.

Viewing a measurement

After download, the measurement will be opened into the Noise Nuisance Summary screen.

This shows a summary of the measurement data with the information essential for Noise Nuisance provided.

The screen shows the overall noise levels measured for the entire period along with a noise profile of the measurement (highlighted in yellow below) and any audio recordings shown below the noise profile (highlighted in red below)

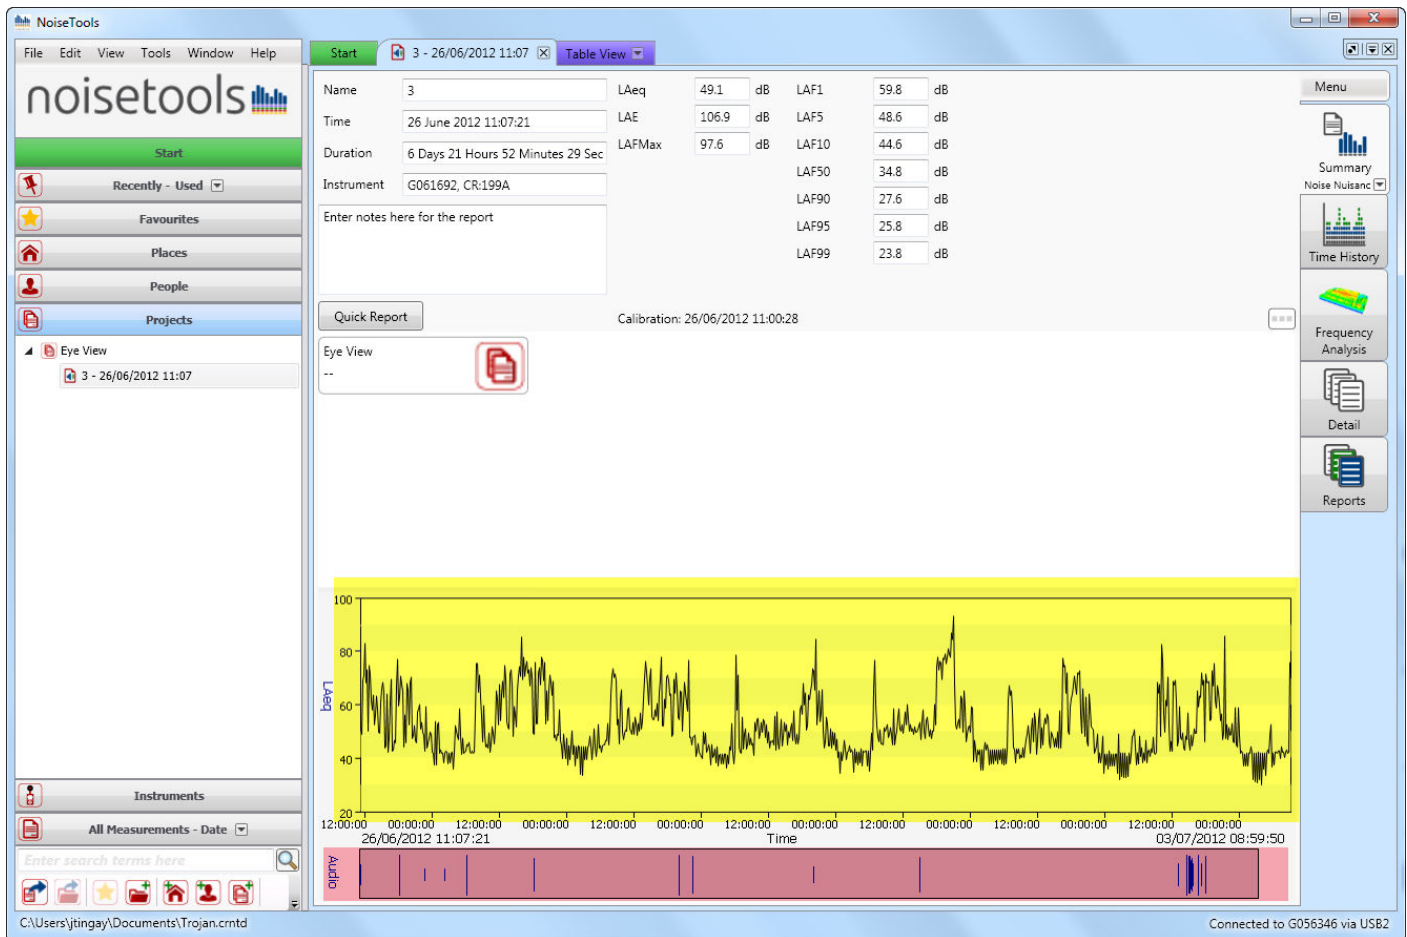

Selecting an audio recording


To replay and listen to any of the audio recordings, click on the recording and the display will move to the Time History display (below)




Click on the highlighted audio recording to zoom into the time around the recording

Replaying an audio recording

To listen to the recording, click on the loudspeaker icon (highlighted below) and press the play button. The audio recording will play back.

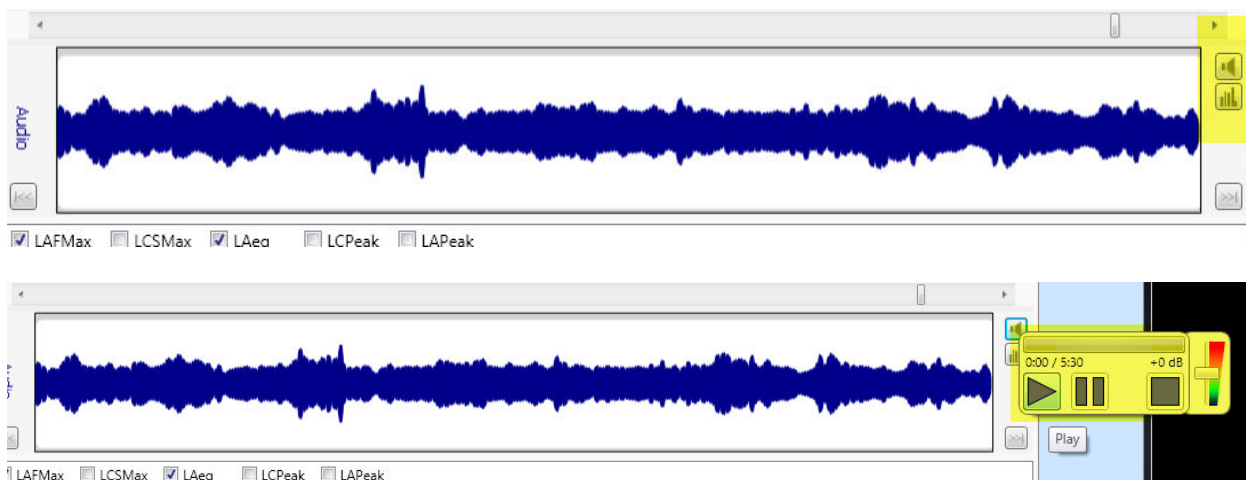

To view the entire measurement, right click on the graph and select 'Zoom All' to view the whole measurement.

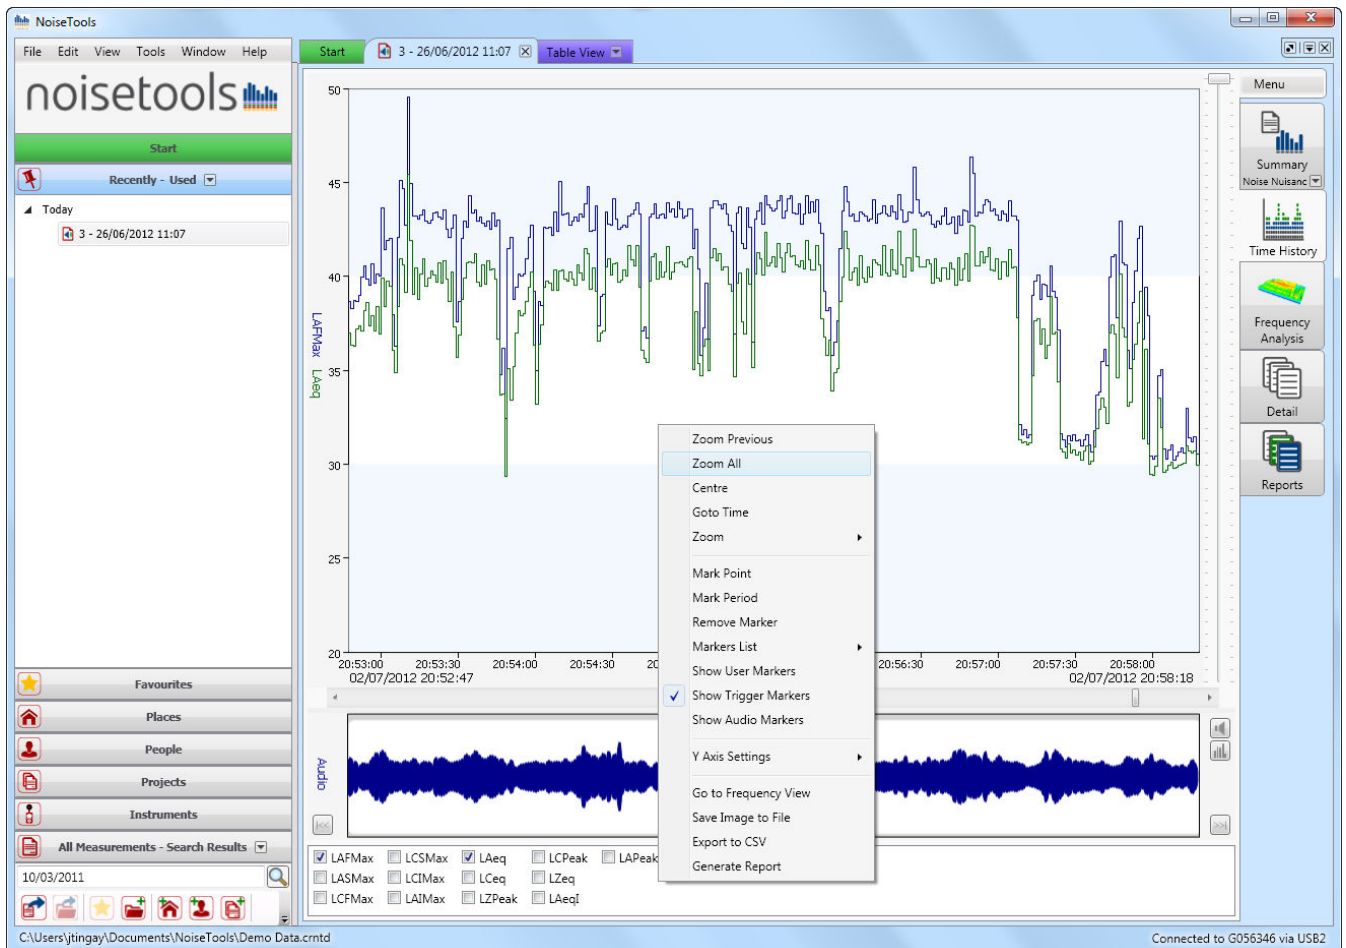

Appendix 1 Configuring the sound level meter for noise nuisance measurements

The sound level meter in the Trojan² Noise Nuisance Recorder can be configured to meet the needs of each user.

In addition to the standard configuration options, there are four that are specific to the Trojan².

Please review these settings before deploying the unit. In most cases, the default settings can be used.

Instrument Settings - G056346, CR:199B

Serial Number: G056346 Type: CR:199B Version: 2.4.1530 (1529) Update

Last Recalibration: 01/01/1970 Current Time: 14/02/2013 15:07:18 Set

Description: Jim's Demo Instrument

These settings are only applied when in Noise Nuisance mode.

Audio Pre-Trigger Time (s): 30 Seconds

Audio Post-Trigger Time (s): 30 Seconds

Max Audio Duration: 5 Minutes

Measurement Timer

Off Repeat Single 1 Hour

Interface

Integrating

Storage

Audio

Ln

Noise Nuisance

Advanced

Communications

Load from Instrument Save to Instrument Close

Audio Pre-Trigger Time

This determines the amount of audio recording that is stored prior to the time when the Start button was pressed.

These settings are only applied when in Noise Nuisance mode.

Audio Pre-Trigger Time (s)	30 Seconds
Audio Post-Trigger Time (s)	Off
Max Audio Duration	10 Seconds
Measurement Timer	1 Minute

Off Repeat Single

Audio Post-Trigger Time

This determines the amount of audio recording that is stored after the Stop button has been pressed.

These settings are only applied when in Noise Nuisance mode.

Audio Pre-Trigger Time (s)	30 Seconds
Audio Post-Trigger Time (s)	30 Seconds
Max Audio Duration	10 Seconds
Measurement Timer	1 Minute

Off Repeat Single

Max Audio Duration

This determines the maximum duration of a single audio recording and can be used to reduce the amount of audio stored when the unit is deployed for long periods.

These settings are only applied when in Noise Nuisance mode.


Audio Pre-Trigger Time (s)	30 Seconds
Audio Post-Trigger Time (s)	30 Seconds
Max Audio Duration	5 Minutes
Measurement Timer	1 Minute

Off Repeat Single

Measurement Timer

This option determines how the instrument will store the noise measurement data.

The default setting is off. This allows the instrument to store a single measurement for as long as the instrument is deployed.

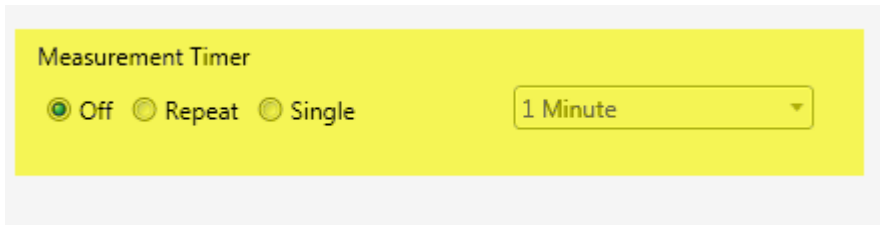


Measurement Timer

Off Repeat Single

1 Minute

This can result in large files and extended download times if the unit is deployed for over 7 days. In these situations, it is recommended that the Repeat Timer option is used.

The **repeat timer** can be set to 168 hours (24 hours x 7 days) which will result in each file being a maximum of 7 days in length. The instrument can store up to 30 days of data and the repeat timer allows this to be broken into smaller, more manageable sections.

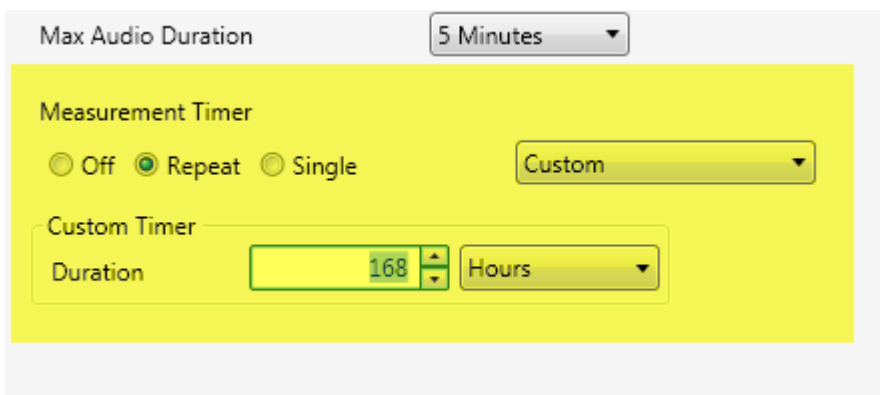

Max Audio Duration 5 Minutes

Measurement Timer


Off Repeat Single

Custom

Custom Timer

Duration 168 Hours

The **single timer** option allows the instrument to be set to measure for a set period and then to stop. For example, setting the single timer to 96 hours will allow the instrument to measure for 4 days at which point it will automatically stop.

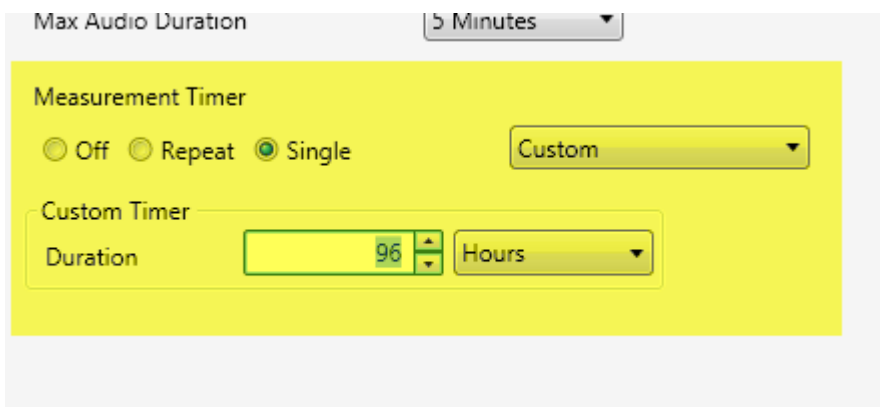

Max Audio Duration 5 Minutes

Measurement Timer

Off Repeat Single


Custom


Custom Timer

Duration 96 Hours


This can be useful where the unit has been deployed but cannot be retrieved at the end of the measurement period. The single timer option allows the amount of data stored to be limited.

Appendix 2 Instrument layout

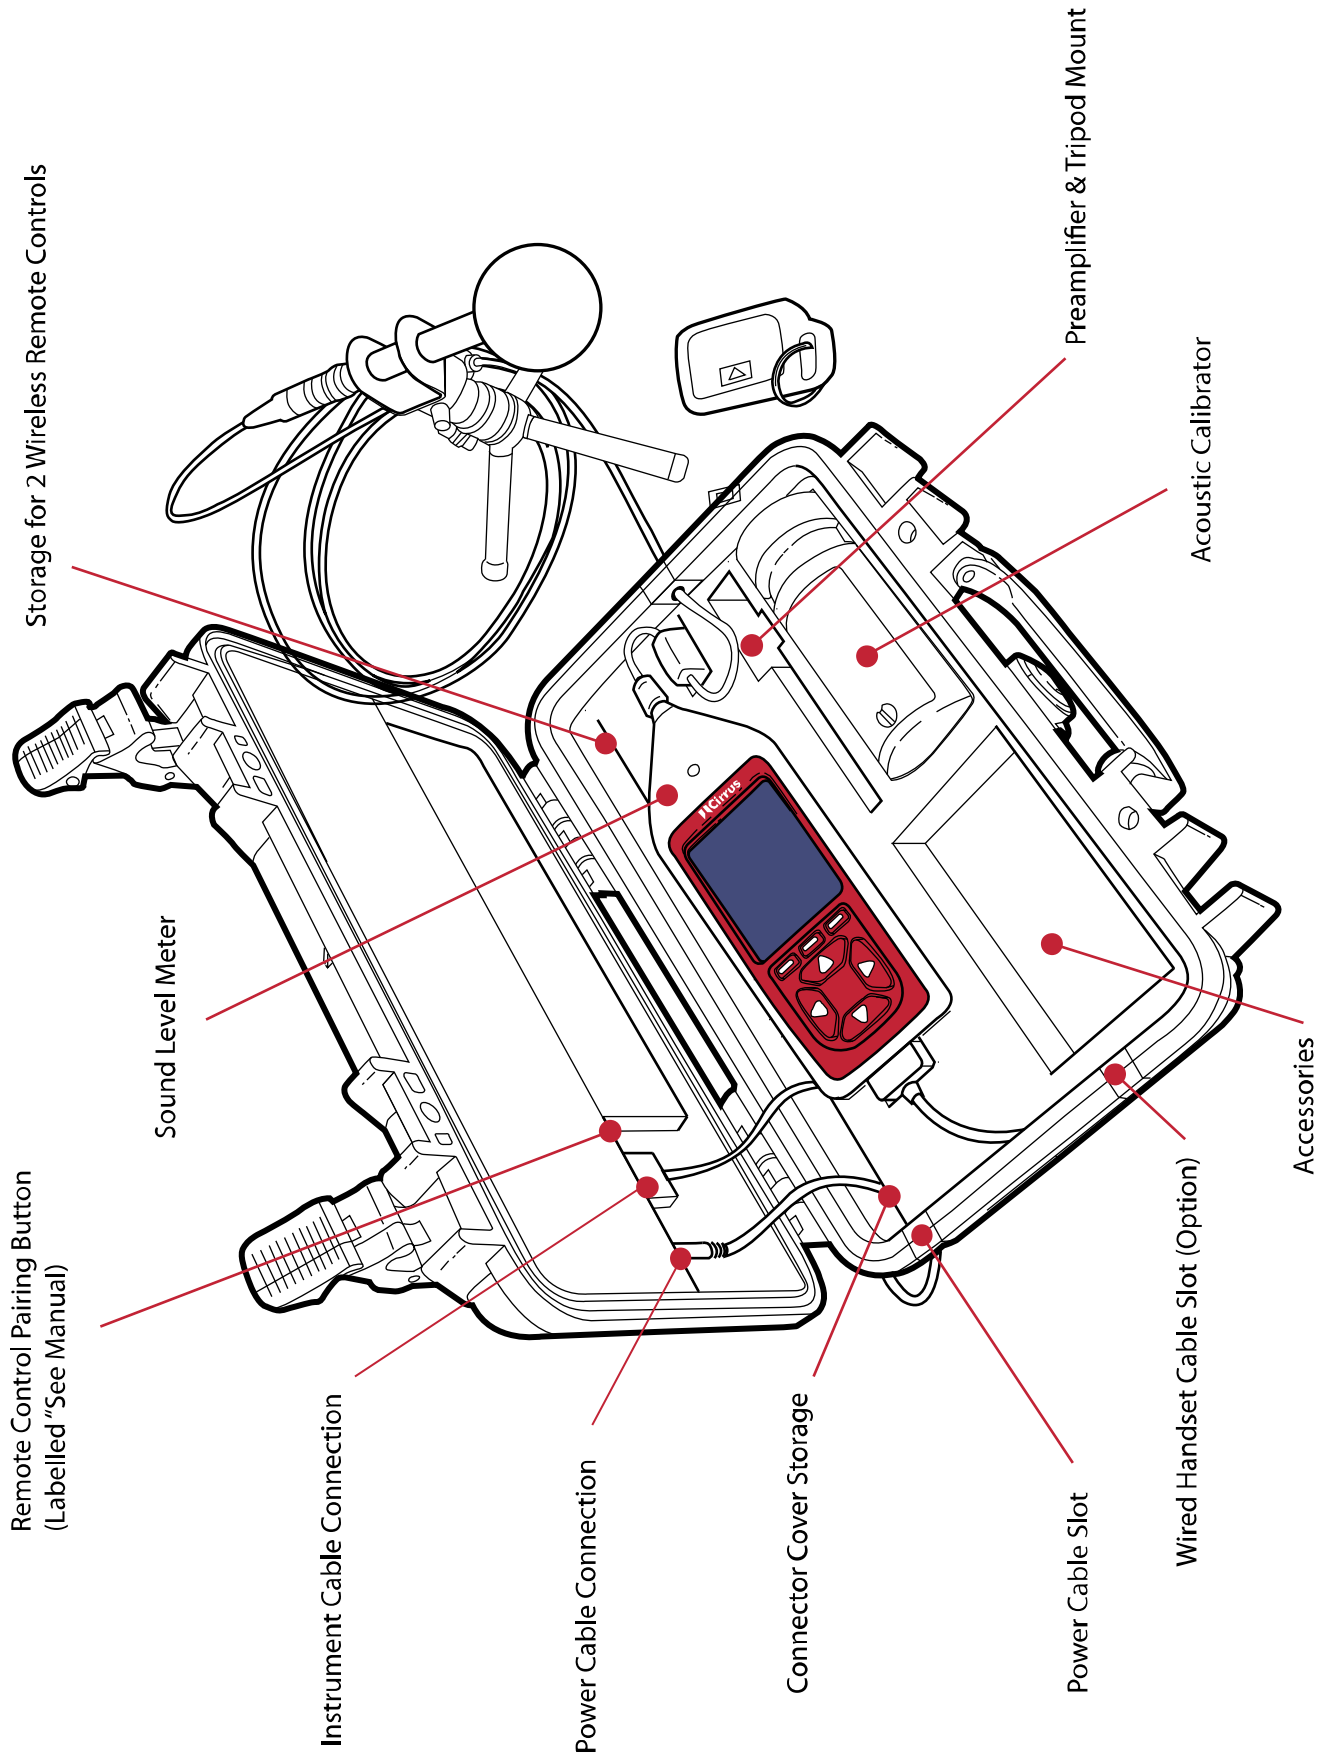

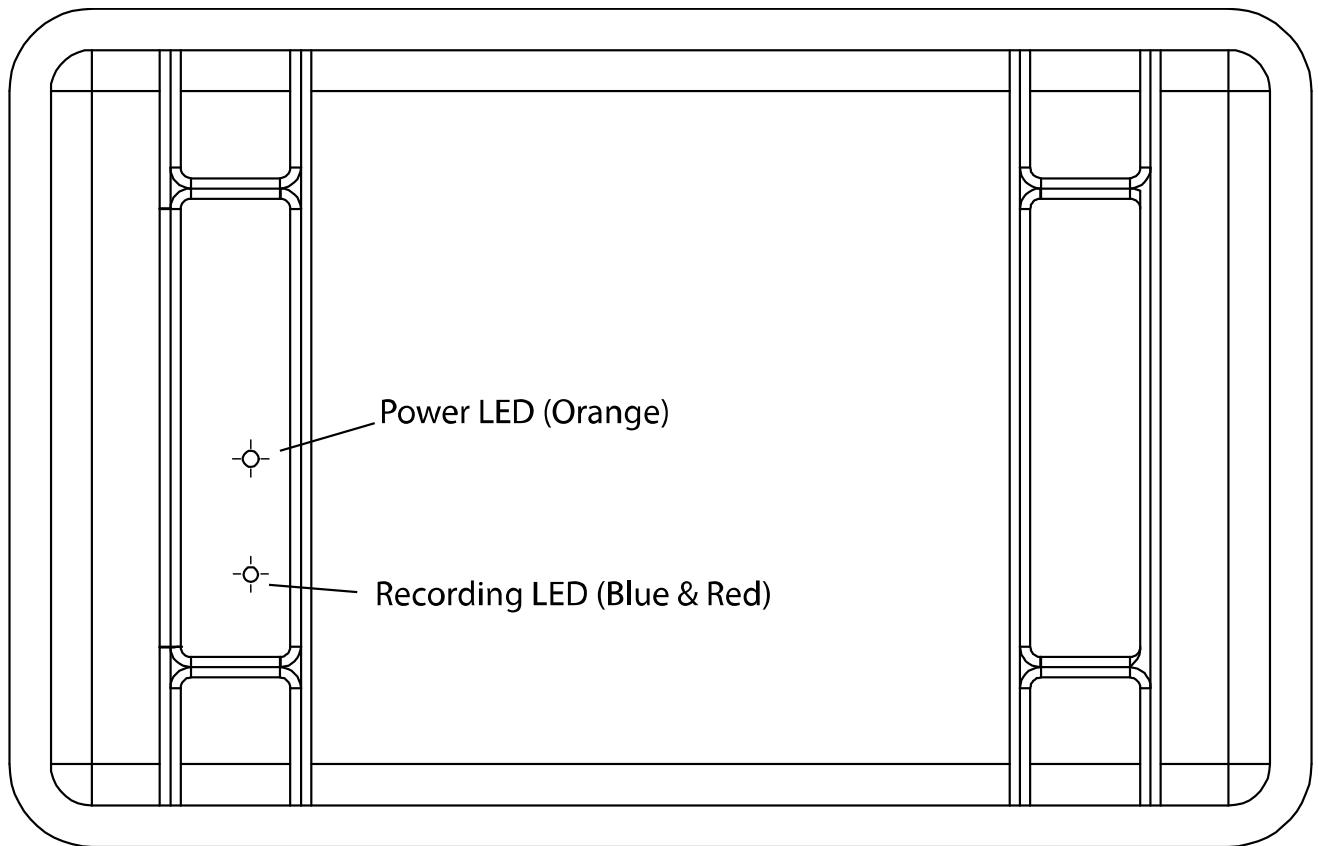

RC:199 Remote Control Unit

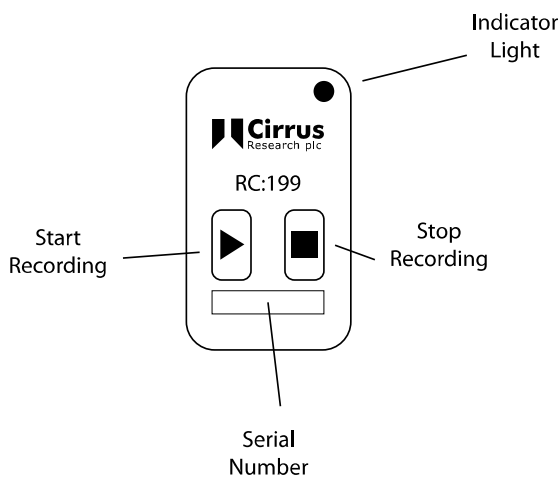

Appendix 3 Using a wired remote control

The Trojan² can be used with an RC:198B wired remote control.

This is connected to the sound level meter via the 3.5mm jack socket on the bottom of the instrument and through the Wired Handset Cable Slot as shown on page 21.

Please note that the wired handset will override any wireless remote control units which cannot be used at the same time.

The power, measurement and recording LED's on the lid will operate as normal.

Appendix 4 Adding a new RC:199 wireless remote control

The Trojan² Noise Nuisance Recorder can support up to 40 individual RC:199 Remote Control Units.

This allow for new remote controls to be added or old units replaced.

To add a new remote control to the system, it must be paired with the receiver (the control box in the case with the status indicator lights).

Pairing a new RC:199 Remote Control with the Receiver Unit

To add a new RC:199 Remote Control, you will need a Paper Clip or other similar small pointer.

1. Power up the Trojan² with the exterior mains power supply.

Ensure that the Trojan² is not recording.

2. Next to the power and instrument cable connections in the lid of the unit there is a small hole labelled "See Manual". This is shown in the diagram on page 21.

Inside this hole is a small switch which must be pressed when carrying out the programming of the remote control unit as described below.

Use a small device such as a paper clip or other blunt device with a diameter of less than 1mm and length of end over 4mm to gently action this switch.

When you press the switch, it will move only a small distance but you will feel a click.

3. Insert the paper clip to push the micro-switch briefly.

The Blue LED will flash when the micro-switch is pushed then once when switch released.

4. Push again.

The Blue LED will flash when the micro-switch is pushed then twice when the switch is released.

5. Push again.

The Blue LED will flash when the micro-switch is pushed then three times when the switch is released.

6. Push the STOP button on the RC:199 Remote Control.

The Blue LED will then illuminate. Press the STOP button again. The Blue LED will then go out and then flash once to indicate learning is complete for STOP.

7. Push the micro-switch briefly.

The Blue LED will flash when the micro-switch is pushed then once when switch is released.

8. Push again.

The Blue LED will flash when the micro-switch is pushed then twice when the switch is released.

9. Push again.

The Blue LED will flash when the micro-switch is pushed then three times when the switch is released.

10 Push again.

The Blue LED will flash when the micro-switch is pushed then four times when the switch is released.

10. Push the RECORD button on the RC:199 Remote Control.

The Blue LED will then illuminate.

Press the RECORD button again.

The Blue LED will then go out and then flash once to indicate learning is complete for RECORD.

11. Repeat the above procedure for each new transmitter.

Now test each transmitter to ensure the STOP and RECORD function works on the Trojan (a blue line on time history as well as the Red Led going on and off.)

CE Declaration of Conformity

Cirrus Research plc Hunmanby UK CE Certificate of Conformity



Manufacturer: Cirrus Research plc
Acoustic House, Bridlington Road
Hunmanby, North Yorkshire, YO14 0PH
United Kingdom
Telephone +44 1723 891655

Equipment Description

The following equipment manufactured after 1st January 2013:

CK:199 Trojan² Noise Nuisance Recorder
CR:199 Sound Level Meter
CR:515 Acoustic Calibrator

Along with their standard accessories

According to EMC Directives 93/68/EEC

meet the following standards

EN 61326-1:2006

EMC : Generic emission standard for residential, commercial and light industrial environments.

EN 61326-1:2006

EMC : Generic immunity standard for residential, commercial and light industrial environments.

Signed

Dated 1st April 2022

Martin Williams
Chief Engineer

Warranty Information.

1. Every new product is provided with a 12-month no-quibble warranty. This covers everything we provide against failure, poor workmanship and accidental damage.
NB - European Union law states a product has to be fit for purpose for 24 months after purchase. This two-year period covers failure and poor workmanship only.
 2. If the product is calibrated by Cirrus Research or an authorised calibration and service centre, then the initial 12-month warranty is extended by a further 12 months, with the same conditions, for up to 15 years in total.
 3. If a product has not been calibrated annually by Cirrus Research or an authorised calibration and service centre, then you may buy back into the warranty scheme for a small fee, plus the cost of calibration. This can only be done once during the life of the product.
 4. If a microphone capsule fails under warranty and is physically damaged, we will replace it with a refurbished capsule.
 5. If you don't wish to have a refurbished capsule, then you can trade in your damaged capsule for a new one, which will incur a fee.
-

Cirrus Research Offices

The addresses given below are the Cirrus Research plc offices. Cirrus Research plc also have approved distributors and agents in many countries worldwide. For details of your local representative, please contact Cirrus Research plc at the address below. Contact details for Cirrus Research authorised distributors and agents are also available from the Internet Web site at the address shown below.

United Kingdom

Cirrus Research plc
Acoustic House
Bridlington Road
Hunmanby
North Yorkshire
United Kingdom
YO14 0PH

Tel: +44 (0) 1723 891655
Email: sales@cirrusresearch.com
Website: www.cirrusresearch.com

Germany

Cirrus Research GmbH
Arabella Center
Lyoner Straße 44 - 48
60528 Frankfurt am Main
Deutschland

Tel: +49 (0) 69 95932047
Email: vertrieb@cirrusresearch.com
Website: www.cirrusresearch.de

France

Cirrus Research France S.A.S.
679 avenue de la République
59800 Lille
France

Tel: +33 (0) 633 976 626
Email: infos@cirrusresearch.fr
Website: www.cirrusresearch.fr



www.cirrusresearch.com
sales@cirrusresearch.com